



COPAN™ MAID for DMF Quick Start  
Guide

007-5769-002

---

#### COPYRIGHT

© 2011–2012 Silicon Graphics International Corp. All Rights Reserved; provided portions may be copyright in third parties, as indicated elsewhere herein. No permission is granted to copy, distribute, or create derivative works from the contents of this electronic documentation in any manner, in whole or in part, without the prior written permission of SGI.

---

#### LIMITED RIGHTS LEGEND

The software described in this document is "commercial computer software" provided with restricted rights (except as to included open/free source) as specified in the FAR 52.227-19 and/or the DFAR 227.7202, or successive sections. Use beyond license provisions is a violation of worldwide intellectual property laws, treaties and conventions. This document is provided with limited rights as defined in 52.227-14.

---

#### TRADEMARKS AND ATTRIBUTIONS

COPAN, SGI InfiniteStorage, SGI OpenVault, SGI, the SGI logo, Supportfolio, and XFS are trademarks or registered trademarks of Silicon Graphics International Corp. or its subsidiaries in the United States and other countries.

Linux is a registered trademark of Linus Torvalds in the U.S. and other countries. Novell is a registered trademark and SUSE is a trademark of Novell, Inc. in the United States and other countries. All other trademarks mentioned herein are the property of their respective owners.

---

## New Features in this Guide

This section discusses the changes in this revision of the guide:

- Support for using COPAN MAID shelves in a fast-mount cache configuration:
  - Chapter 1, "Introduction" on page 1
  - Figure 1-2 on page 4
  - "COPAN MAID as Fast-Mount Cache" on page 8
  - "Configure DMF Parameters" on page 43
  - Table 4-2 on page 44
- Support for setting the tape size when you import volumes, which is required to accurately estimate the current DMF capacity. See "Import the DMF Volumes into OpenVault" on page 54.
- DMF Manager no longer requires a password to enter observer mode.



---

## Record of Revision

<b>Version</b>	<b>Description</b>
001	November 2011 Original publication
002	April 2012 Revised with ISSP 2.6



---

# Contents

<b>About This Guide</b>	<b>xv</b>
Related Publications	xv
Obtaining Publications	xv
Conventions	xvi
Reader Comments	xvii
<b>1. Introduction</b>	<b>1</b>
DMF in a COPAN MAID Environment	2
System Overview	2
DMF Overview	5
COPAN MAID as Permanent Storage	5
COPAN MAID as Fast-Mount Cache	8
RAID Sets	11
Power Budget	11
Shelf Management	12
Backups and DMF	12
Formatting the RAID Sets	12
Naming Conventions	13
Configuring OpenVault	14
Summary of the Completed Configuration	14
Preliminary Requirements	16
Set Up the DMF Server and COPAN MAID System	16
Contact SGI to Apply the AOR Files	16
Create the Directories that DMF Requires	16
<b>007-5769-002</b>	<b>vii</b>

Determine the Backup Requirements for Your Site . . . . .	18
Site-Specific Factors to Consider for Backups . . . . .	18
Backup Filesystem and RAID Set Requirements . . . . .	18
Default Backup Policy for DMF and COPAN MAID . . . . .	19
Install the DMF Licenses . . . . .	19
Establish OpenVault Communication . . . . .	20
Overview of the Steps in this Guide . . . . .	20
<b>2. Format the RAID sets and Create Volumes . . . . .</b>	<b>21</b>
Selecting Appropriate Cabinet Identifiers . . . . .	21
Cabinet ID Choice . . . . .	21
Cabinet ID Check ( <i>Existing Site Only</i> ) . . . . .	22
ov_copan Command Overview . . . . .	23
Run ov_copan From the Owner Node . . . . .	23
Format a RAID Set . . . . .	24
Create Volumes . . . . .	25
Display Information . . . . .	25
Matching Device Names to MAID Shelves . . . . .	26
Formatting the RAID Sets for a Shelf and Creating Volumes . . . . .	28
Format an Entire Shelf for DMF Use . . . . .	28
Format a Shelf for Both DMF and Backups ( <i>Optional</i> ) . . . . .	30
Formatting Considerations for Backup . . . . .	30
Dedicate Entire RAID sets for Backups . . . . .	31
Divide a RAID set into DMF and Backup Regions . . . . .	33
<b>3. Configure OpenVault . . . . .</b>	<b>37</b>
Use ov_shelf to Configure OpenVault for Each Shelf . . . . .	37
Add the dmf Application to OpenVault . . . . .	38

---

<b>4. Configure DMF</b>	<b>43</b>
Configure DMF Parameters	43
Summary of Configuration Parameters	43
Configure DMF for a New Site	45
Configure COPAN MAID for an Existing DMF Site	49
Provide DMF with the OpenVault Security Keys	53
Import the DMF Volumes into OpenVault	54
<b>5. Test the DMF System</b>	<b>57</b>
Test that OpenVault Can Mount a Migration Volume	57
Validate the DMF Configuration	57
Enable Audits of the DMF-Managed Filesystems	59
Test the DMF Configuration	63
<b>6. Maintenance Tasks</b>	<b>65</b>
Deleting a Volume from a RAID set	65
Unformatting a RAID set	67
Adding a COPAN MAID Cabinet or Shelf	69
Verifying the OpenVault Components for a MAID Shelf	69
Updating OpenVault Components After a Power Budget Change	70
Removing OpenVault Components	70
Stopping OpenVault Components	71
<b>7. Troubleshooting</b>	<b>73</b>
Repairing OpenVault Components	73
Unable to Delete a Volume	73
<b>Glossary</b>	<b>75</b>

**Index . . . . . 85**

---

## Figures

<b>Figure 1-1</b>	DMF with COPAN MAID as Permanent Storage . . . . .	3
<b>Figure 1-2</b>	DMF with COPAN MAID as a Fast-Mount Cache . . . . .	4
<b>Figure 1-3</b>	COPAN MAID as Permanent Storage: Migrating File Data . . . . .	6
<b>Figure 1-4</b>	COPAN MAID as Permanent Storage: Freeing and Recalling File Data . . . . .	7
<b>Figure 1-5</b>	COPAN MAID as a Fast-Mount Cache: Migrating File Data . . . . .	9
<b>Figure 1-6</b>	COPAN MAID as a Fast-Mount Cache: Freeing and Recalling File Data . . . . .	10
<b>Figure 1-7</b>	MAID Shelf Contents . . . . .	11
<b>Figure 1-8</b>	VSN Components for COPAN MAID . . . . .	14
<b>Figure 1-9</b>	Sample Configuration for COPAN MAID as Permanent Storage . . . . .	15
<b>Figure 1-10</b>	Sample Configuration for COPAN MAID as a Fast-Mount Cache . . . . .	15
<b>Figure 4-1</b>	Replace the Filesystem Name . . . . .	47



---

## Tables

<b>Table 4-1</b>	Parameters of Particular Interest for COPAN MAID as Permanent Storage	. . .	44
<b>Table 4-2</b>	Parameters of Particular Interest for COPAN MAID as Fast-Mount Cache	. . .	44



---

## About This Guide

This guide tells you how to configure an SGI® COPAN™ native massive array of idle disks (MAID) system for use with the SGI InfiniteStorage™ Data Migration Facility (DMF) and the SGI OpenVault™ mounting service.

### Related Publications

The following publications contain additional information:

- *DMF 5 Administrator Guide for SGI InfiniteStorage*
- *DMF 5 Filesystem Audit Guide for SGI InfiniteStorage*
- *OpenVault Operator's and Administrator's Guide*
- *SGI InfiniteStorage Software Platform* release note (the `README.txt` file, see below to obtain)
- *XVM Volume Manager Administrator Guide*

Also see the *Platform Service Manager Online Help* available from the PSM **Help** menu.

### Obtaining Publications

You can obtain SGI documentation as follows:

- See the SGI Technical Publications Library at <http://docs.sgi.com>. Various formats are available. This library contains the most recent and most comprehensive set of online books, man pages, and other information.
- You can view man pages by typing `man title` at a command line.
- The `/docs` directory on the ISSP DVD or in the Supportfolio™ download directory contains the following:
  - The ISSP release note: `/docs/README.txt`
  - DMF release notes: `/docs/README_DMF.txt`

- A complete list of the packages and their location on the media:  
`/docs/RPMS.txt`
- The packages and their respective licenses: `/docs/PACKAGE_LICENSES.txt`
- The release notes and manuals are provided in the `noarch/sgi-isspdocs` RPM and will be installed on the system into the following location:  
`/usr/share/doc/packages/sgi-issp-ISSPVERSION/TITLE`

## Conventions

The following conventions are used throughout this document:

<b>Convention</b>	<b>Meaning</b>
<code>command</code>	This fixed-space font denotes literal items such as commands, files, routines, path names, signals, messages, and programming language structures.
<i>variable</i>	Italic typeface denotes variable entries and words or concepts being defined.
<b>user input</b>	This bold, fixed-space font denotes literal items that the user enters in interactive sessions. (Output is shown in nonbold, fixed-space font.)
[ ]	Brackets enclose optional portions of a command or directive line.
...	Ellipses indicate that a preceding element can be repeated.
<code>manpage(x)</code>	Man page section identifiers appear in parentheses after man page names.
<b>GUI</b>	This font denotes the names of graphical user interface (GUI) elements such as windows, screens, dialog boxes, menus, toolbars, icons, buttons, boxes, fields, and lists.

## Reader Comments

If you have comments about the technical accuracy, content, or organization of this publication, contact SGI. Be sure to include the title and document number of the publication with your comments. (Online, the document number is located in the front matter of the publication. In printed publications, the document number is located at the bottom of each page.)

You can contact SGI in any of the following ways:

- Send e-mail to the following address:  
techpubs@sgi.com
- Contact your customer service representative and ask that an incident be filed in the SGI incident tracking system.
- Send mail to the following address:

SGI  
Technical Publications  
46600 Landing Parkway  
Fremont, CA 94538

SGI values your comments and will respond to them promptly.



## Introduction

This guide provides an example of how to configure an SGI® COPAN™ native massive array of idle disks (MAID) system for use with the SGI InfiniteStorage™ Data Migration Facility (DMF) and the OpenVault™ mounting service. The procedures in this guide use the sample following DMF configuration files, making as few modifications as possible:

- `dmf.conf.copan_maid`, for using COPAN MAID as permanent secondary storage.
- `dmf.conf.fmc`, for using COPAN MAID as a fast-mount cache in conjunction with at least one permanent migration target. The example file specifies physical tape as the permanent migration target, but you could use another target.

You can divide the COPAN MAID resource into a set of volume groups (VGs) for permanent storage and another set of VGs for fast-mount cache, but that is not directly addressed by this guide.

---

**Note:** SGI always recommends that you migrate at least two copies to permanent storage targets in order to prevent file data loss in the event that a migrated copy is lost. When using a fast-mount cache, SGI therefore recommends that you migrate at least three copies (one to the temporary cache and two to permanent storage targets).

---

This guide documents the supported procedures for configuring DMF with COPAN MAID. If you deviate from these procedures, DMF may not function.

This chapter discusses the following:

- "DMF in a COPAN MAID Environment" on page 2
- "Preliminary Requirements" on page 16
- "Overview of the Steps in this Guide" on page 20

For complete details about DMF and its configuration, see the *DMF 5 Administrator Guide for SGI InfiniteStorage* and the `ov_copan(8)` man page.


## DMF in a COPAN MAID Environment

This section discusses the following:

- "System Overview" on page 2
- "DMF Overview" on page 5
- "RAID Sets" on page 11
- "Power Budget" on page 11
- "Shelf Management" on page 12
- "Backups and DMF" on page 12
- "Formatting the RAID Sets" on page 12
- "Naming Conventions" on page 13
- "Configuring OpenVault" on page 14
- "Summary of the Completed Configuration" on page 14


### System Overview

A COPAN cabinet has up to eight MAID shelves, shelf 0 (bottom) through shelf 7 (top). A site can have multiple cabinets with differing numbers of shelves. Figure 1-1 shows a conceptual drawing of DMF using COPAN MAID with 8 shelves as permanent storage.

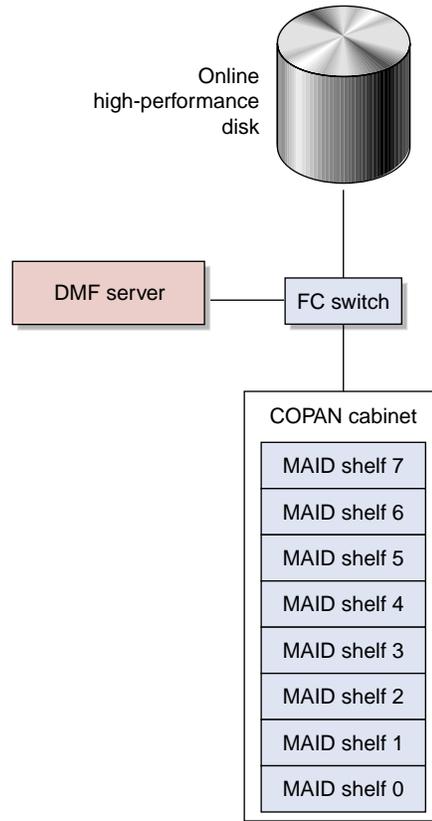

**Figure 1-1** DMF with COPAN MAID as Permanent Storage

If you use COPAN MAID in a fast-mount cache configuration, you would also need a permanent migration target, such as physical tape. Figure 1-2 shows a conceptual drawing of DMF using COPAN MAID with 4 shelves as fast-mount cache.

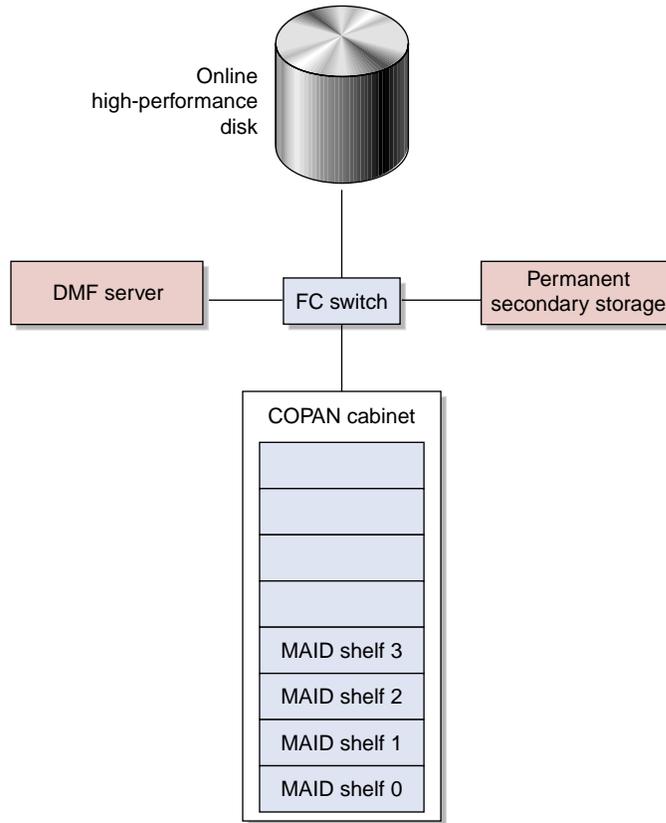

**Figure 1-2** DMF with COPAN MAID as a Fast-Mount Cache

For users with higher throughput requirements, the *Parallel Data Mover Option* allows additional data movers on dedicated nodes to operate in parallel with the integrated data mover functionality on the DMF server, increasing data throughput and enhancing resiliency. The dedicated function of a *parallel data mover node* is to move data from the filesystem to secondary storage or from secondary storage back into the primary filesystem. Offloading the majority of I/O from the DMF server improves I/O throughput performance.

For more information about the Parallel Data Mover Option or about DMF in a CXFS clustered filesystem environment, see the DMF administrator's guide.

## DMF Overview

---

**Note:** For complete details about DMF, see the DMF administrator's guide.

---

When DMF migrates or recalls files, it issues a mount request to the OpenVault mounting service. OpenVault mounts the correct COPAN MAID archive filesystem and DMF performs I/O to the appropriate volume on that filesystem.

DMF continuously monitors the managed user filesystem according to the policies established in the DMF configuration file. Only the most timely data resides on the higher performance primary filesystem; less timely data is automatically migrated to the archive tiers. However, data always appears to be online to end users and applications, regardless of its actual location.

DMF moves file data to secondary storage on the COPAN MAID disk, but it leaves critical metadata (such as index nodes, or *inodes*, and directories) in the primary filesystem. A user retrieves a file simply by accessing it normally through NFS; DMF automatically recalls the file's data from the secondary storage, caching it on the primary filesystem. From a user's perspective, all content is visible all of the time.

You can use COPAN MAID as either of the following:

- "COPAN MAID as Permanent Storage" on page 5
- "COPAN MAID as Fast-Mount Cache" on page 8


### COPAN MAID as Permanent Storage

Figure 1-3 and Figure 1-4 show the concepts of migrating and recalling file data when using COPAN MAID as permanent storage.


---

**Note:** For simplicity, these diagrams do not address a second copy. Data will be recalled from a second copy only if necessary.

---

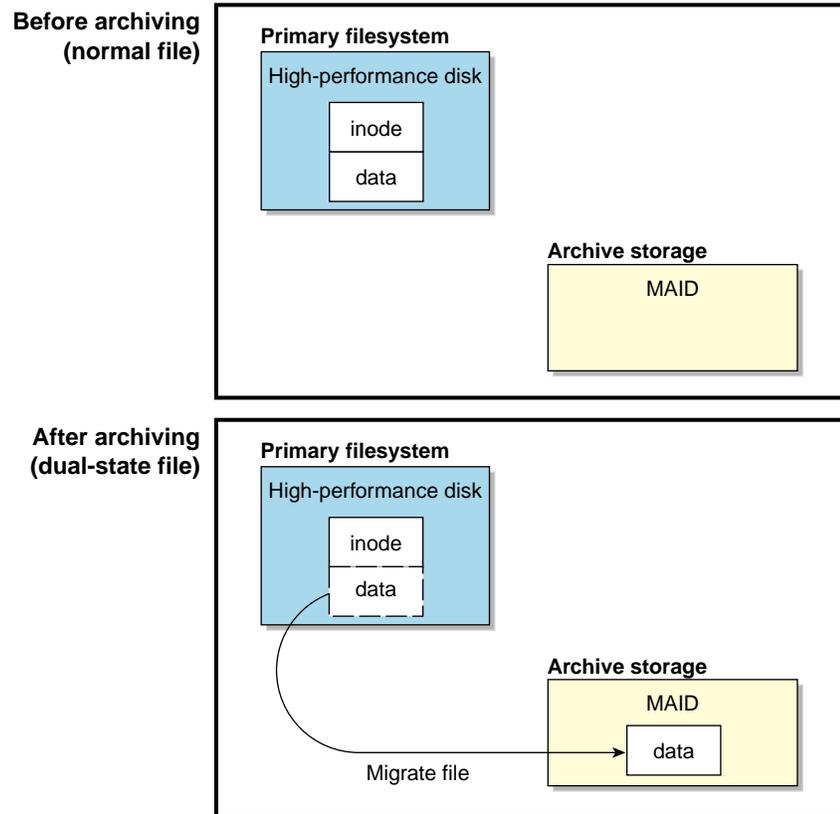

**Figure 1-3** COPAN MAID as Permanent Storage: Migrating File Data

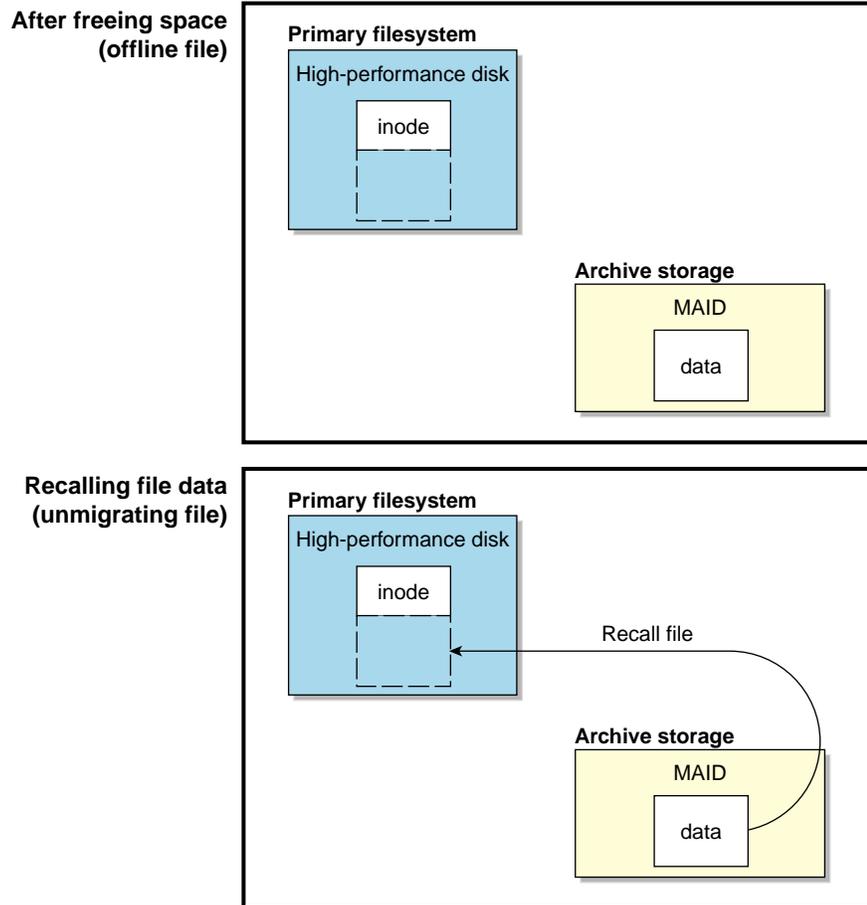

**Figure 1-4** COPAN MAID as Permanent Storage: Freeing and Recalling File Data

Figure 1-3 and Figure 1-4

The figures describe the archiving concept, showing that data is removed from the primary filesystem after migrating (represented by the dashed lines) and moved to the archive on MAID, but the inode remains in place in the primary filesystem. During the period when the file data has been copied to the secondary storage on MAID but has not yet been deleted from the primary filesystem, the file is considered to be *dual-state*. After the file data has been deleted from the primary filesystem, the

file is considered to be *offline*. SGI recommends that you migrate two copies of a file to prevent file data loss in the event that a migrated copy is lost.

Because the inodes and directories remain online, users and applications never need to know where the file data actually resides; archived files remain cataloged in their original directories and are accessed as if they were still online. In fact, when drilling into directories or listing their contents, a user cannot determine whether a file is online or offline; determining the data's actual residence requires special commands or command options. The only difference users might notice is a slight delay in access time. Therefore, DMF allows you to oversubscribe your online disk in a manner that is transparent to users.

### COPAN MAID as Fast-Mount Cache

The *fast-mount cache* configuration migrates data simultaneously to COPAN MAID as a temporary cache and to permanent storage on another migration target (such as physical tape). Volumes on the cache can be freed immediately when the fullness threshold is reached. SGI always recommends that you migrate at least two copies to permanent storage targets in order to prevent file data loss in the event that a migrated copy is lost. SGI therefore recommends that you migrate at least three copies for this configuration (one to the temporary cache and two to permanent storage targets).

Figure 1-5 and Figure 1-6 show the concepts of migrating and recalling file data when using COPAN MAID as a fast-mount cache in conjunction with permanent storage, in this case on physical tape.

---

**Note:** For simplicity, these diagrams do not address a second permanent storage copy. Data will be recalled from a second permanent storage copy only if necessary.

---

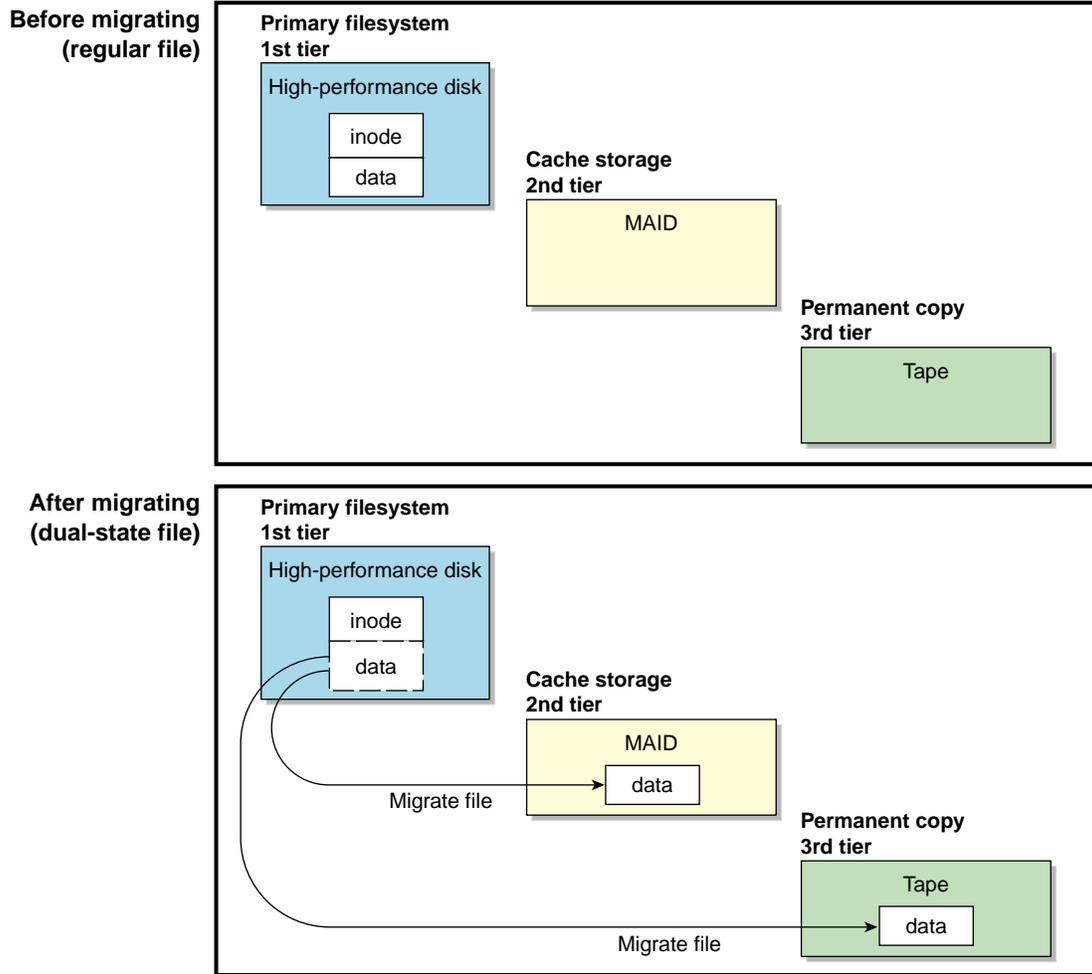


Figure 1-5 COPAN MAID as a Fast-Mount Cache: Migrating File Data

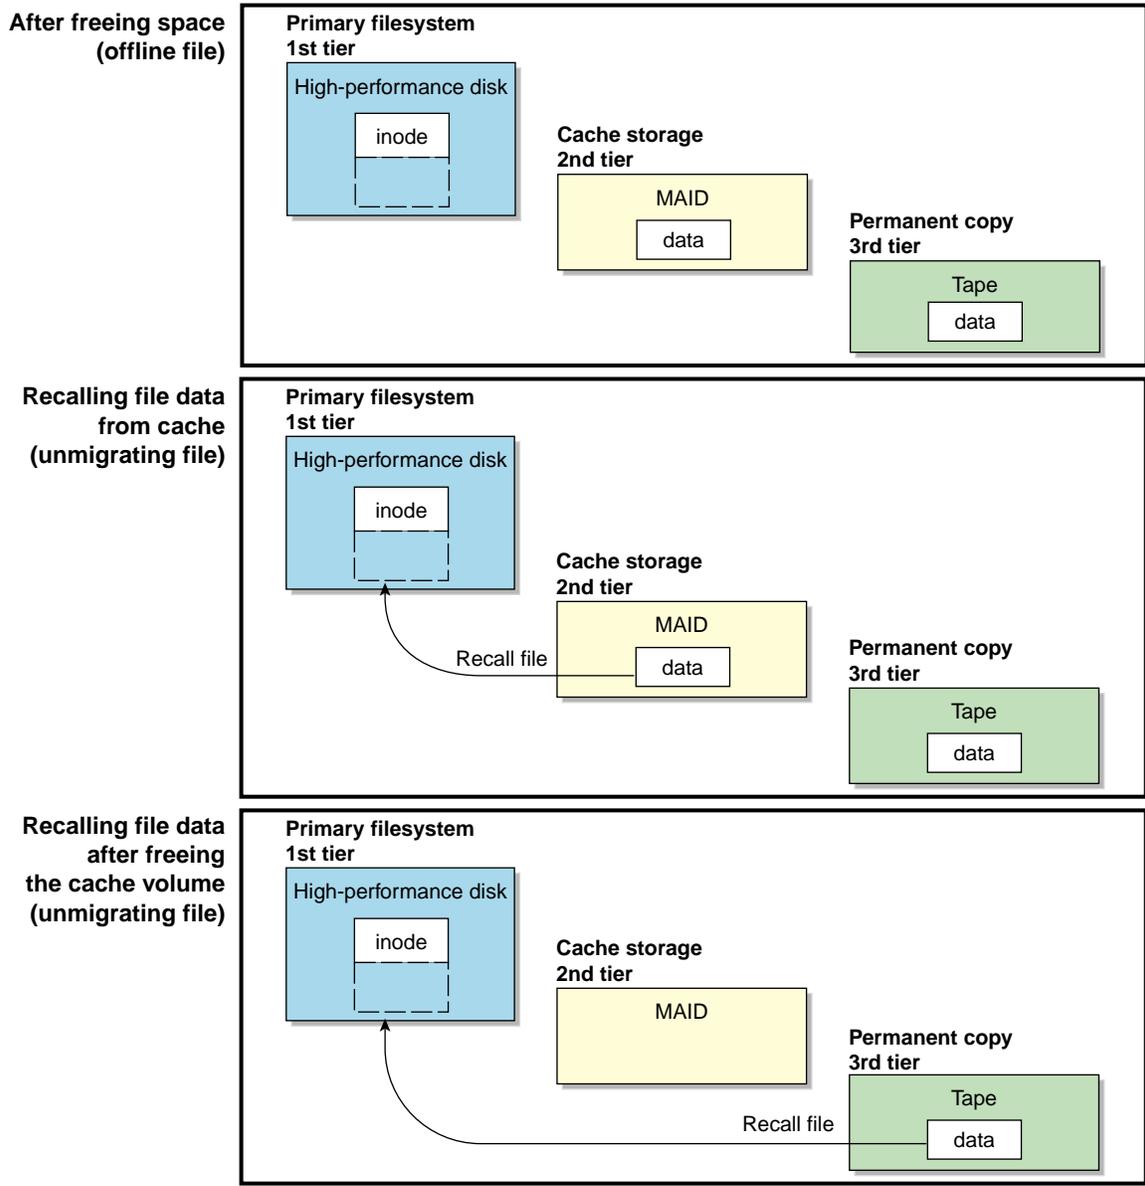


Figure 1-6 COPAN MAID as a Fast-Mount Cache: Freeing and Recalling File Data

## RAID Sets

COPAN MAID uses *redundant array of independent disks (RAID)* technology. Each MAID shelf has a shelf controller and 27 groups of disks; each group is referred to as a *RAID set*:

- The first 26 RAID sets each appear to the DMF server and any parallel data mover nodes as a SCSI disk device *logical unit (LUN)*. Each RAID set has three data disks plus one parity disk (known as *RAID 5*). These RAID sets are named A-Z, and the associated LUNs are numbered 1–26. (LUN 0 is the shelf controller.)
- The 27th RAID set contains *always on regions (AOR)*, which are specially mapped ranges of blocks from other host-accessible LUNs (see "Contact SGI to Apply the AOR Files" on page 16.) This RAID set is not presented to the host as a LUN and is not consumed by DMF during data migration.

Figure 1-7 shows a conceptual example of a MAID shelf.

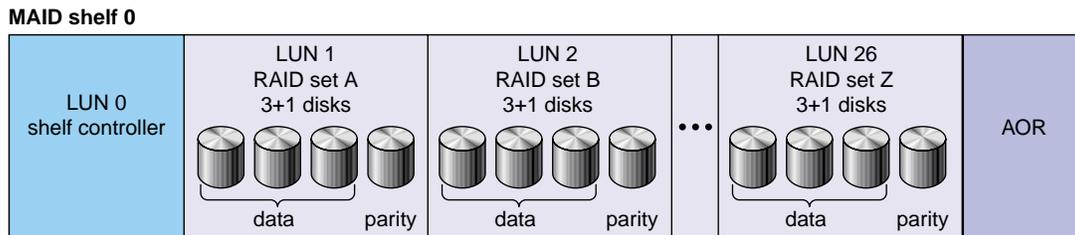


Figure 1-7 MAID Shelf Contents

After you complete the procedures in this guide, each RAID set A-Z will be formatted with an XFS filesystem. Large files, known as *volumes*, will be preallocated on the filesystem. From the point of view of DMF and OpenVault, these volumes are the logical equivalent of a tape cartridge. (These volumes are sometimes referred to as *tapes* in command output and documentation.)

## Power Budget

COPAN MAID contains power-management features that spin down and power off the least-recently-used data RAID sets after a period of disuse or when a fixed power budget is exceeded. DMF carefully controls how many RAID sets are accessed at once

and groups archival/retrieval requests in order to move data efficiently. If data is required from a disk that is powered off, the drives in the RAID set that contains the data being requested will be powered on; if necessary, the drives in another RAID set will be powered off so that the power budget is maintained.

## Shelf Management

Each MAID shelf is managed by one system at a time, either the DMF server or one of the DMF parallel data mover nodes.

---

**Note:** If you want to enable failover of this management from one system to another, or failover of the DMF server capability, you must install the SUSE® Linux® High Availability Extension (HAE) product and configure an HA cluster for use with SGI resource agents. For more information, see *High Availability Extension and SGI InfiniteStorage*.

---

## Backups and DMF

DMF moves only the data associated with files, not the file inodes or directories. Therefore, you must still perform regular backups to protect files that have not been migrated, as well as inodes and directory structures. You must store the backups on physical tape or in a filesystem that is not managed by DMF, such as on a RAID set that has been formatted for non-DMF use.

## Formatting the RAID Sets

You will use the `ov_copan(8)` command to format the RAID sets for DMF-managed data or (optionally) for backups. The `ov_copan` command divides each RAID set into two regions (one of which is usually of zero size):

- The *DMF region*, which consists of a single XFS filesystem. (This filesystem is reserved exclusively for use by DMF, do not modify it directly.)
- The *non-DMF region*, on which you can optionally make an XFS filesystem for storing DMF backups, using `mkfs.xfs(8)` and `xvm(8)`.

See Chapter 2, "Format the RAID sets and Create Volumes" on page 21.

## Naming Conventions

DMF uses a *volume serial number (VSN)* to uniquely identify a specific volume at your site. The volumes may be distributed across any number of COPAN cabinets, MAID shelves, and RAID sets. All VSNs that are managed by a single OpenVault instance must be unique.


When used with COPAN MAID, the VSN has six characters and a specific structure. The following string represents the components of the COPAN MAID VSN:

*CCSRVV*

where:

- *CC* is the *cabinet identifier* that uniquely represents a cabinet at your site. This guide uses *C0* (for “COPAN cabinet 0”). You may use a different naming convention if you prefer, using the characters `[0--9A-Z][0--9A-Z]`. (See “Selecting Appropriate Cabinet Identifiers” on page 21.)
- *S* represents the shelf position in the cabinet. There are up to eight shelves in a COPAN cabinet, shelf 0 (bottom) through shelf 7 (top). The three-character string *CCS* (such as *C01*) is called the *shelf identifier* and can be used as an argument in some OpenVault commands.
- *R* represents the RAID set. Each shelf contains 26 RAID sets available for DMF use, numbered *A* through *Z*. The four-character string *CCSR* (such as *C01B*) is called the *RAID-set identifier* and can be used as an argument in some OpenVault commands.
- *VV* represents an individual volume within a given RAID set. Each RAID set accommodates up to 1,296 volumes, numbered *00* through *ZZ*.

For example, the VSN *C01B03* identifies the fourth volume (*03*) on the second RAID set (*B*) of shelf 1 in COPAN cabinet 0, as shown in Figure 1-8.

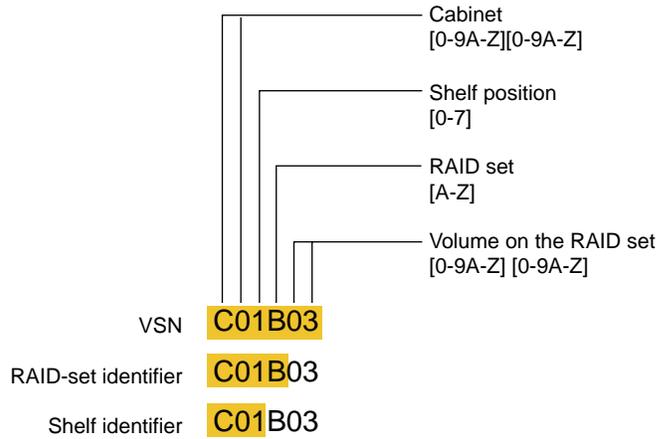

**Figure 1-8** VSN Components for COPAN MAID

## Configuring OpenVault

You will use the `ov_admin(8)` command to add the DMF application to OpenVault and the `ov_shelf(8)` command to configure OpenVault to use the shelves. See Chapter 3, "Configure OpenVault" on page 37.

## Summary of the Completed Configuration

As an example, the procedures in this guide will lead you through the process of configuring a single cabinet with multiple shelves. You must adjust the procedures and the DMF configuration file to fit your site-specific situation.

After you complete the procedures in this guide, the cabinet will have up to eight independent OpenVault libraries, C00 through C07, and a set of up to sixteen drives per shelf, such as C00d00 through C00d15 for shelf 0. Each library will be used with a corresponding volume group, such as `vg_c00` through `vg_c07`. The volume groups will be managed as two DMF migrate groups (`mg0` and `mg1` for COPAN MAID as permanent storage or `copan_fmc1` and `copan_fmc2` for fast-mount cache)

Figure 1-9 and Figure 1-10 describe the parts of the configuration that relate to COPAN MAID.

COPAN		OpenVault		DMF		
Cabinet	Shelf name	Library name	Drive names	Drive group	Volume group	Migrate group
shelf 7	C07	C07	C07d00-C07d15	dg_c07	vg_c07	} mg1
shelf 6	C06	C06	C06d00-C06d15	dg_c06	vg_c06	
shelf 5	C05	C05	C05d00-C05d15	dg_c05	vg_c05	
shelf 4	C04	C04	C04d00-C04d15	dg_c04	vg_c04	
shelf 3	C03	C03	C03d00-C03d15	dg_c03	vg_c03	} mg0
shelf 2	C02	C02	C02d00-C02d15	dg_c02	vg_c02	
shelf 1	C01	C01	C01d00-C01d15	dg_c01	vg_c01	
shelf 0	C00	C00	C00d00-C00d15	dg_c00	vg_c00	

Figure 1-9 Sample Configuration for COPAN MAID as Permanent Storage

COPAN		OpenVault		DMF			
Cabinet	Shelf name	Library name	Drive names	Drive group	Volume group	Migrate group	Fast-mount cache
shelf 3	C03	C03	C03d00-C03d15	dg_c03	vg_c03		} copan_fmc2
shelf 2	C02	C02	C02d00-C02d15	dg_c02	vg_c02		
shelf 1	C01	C01	C01d00-C01d15	dg_c01	vg_c01	} mg_fmc	} copan_fmc1
shelf 0	C00	C00	C00d00-C00d15	dg_c00	vg_c00		

Figure 1-10 Sample Configuration for COPAN MAID as a Fast-Mount Cache

## Preliminary Requirements

Before you configure the COPAN MAID system and DMF, do the following:

- "Set Up the DMF Server and COPAN MAID System" on page 16
- "Contact SGI to Apply the AOR Files" on page 16
- "Create the Directories that DMF Requires" on page 16
- "Determine the Backup Requirements for Your Site" on page 18
- "Install the DMF Licenses" on page 19
- "Establish OpenVault Communication" on page 20

### Set Up the DMF Server and COPAN MAID System

You must ensure that the DMF server and the COPAN MAID system are on the network and zoned appropriately. The RAID sets must be visible only to the active DMF server, the passive DMF server (if applicable), and the parallel data mover nodes; the RAID sets must not be visible to any other nodes. You must also install the required software for COPAN MAID and DMF. For more information, see the manuals and release notes listed in "About This Guide".

### Contact SGI to Apply the AOR Files

The *always on regions* (AOR) RAID set allows concurrent access to small, critical sections of all the other LUNs, whether their underlying RAID sets are spinning or not. The special mapping is applied to the MAID shelf from a predefined AOR configuration file that is specific to the host operating system, volume manager, filesystem, application, and capacity of the disks in the RAID set.

Before you can configure DMF for use with COPAN MAID, the AOR configuration files must be applied by SGI service personnel. For assistance, contact SGI Support.

### Create the Directories that DMF Requires

Use the information about configuring DMF administrative directories appropriately in the "Best Practices" chapter of the DMF administrator's guide to create the required filesystems and directories of the appropriate size on a general-purpose RAID storage system.

In a production system, SGI in most cases recommends that you restrict these directories to DMF use and make them the mountpoint of a filesystem, in order to limit the loss of data in the case of a filesystem failure.

---

**Note:** A DMF administrative directory must not be in a DMF-managed filesystem.

---

You specify the location of these directories by using parameters in the DMF configuration file. The following lists show the directory names used by the sample configuration file (using these names will minimize the number of changes you must make):

- **Required** to be dedicated to DMF use and to be a filesystem mountpoint:
  - *(If used)* `/dmf/move` for the scratch filesystem that is used to move files between volume groups

---

**Note:** You must specify a scratch filesystem if you intend to use the `dmmove(8)` command. The scratch filesystem should be dedicated to the `dmmove` function. You must use the `dmi,mtpt=/dmf/move` option.

---

- **Recommended** to be dedicated to DMF use and to be a filesystem mountpoint:
  - `/dmf/home` for directories in which the DMF daemon database, library server (LS) database, and related files reside
  - `/dmf/journals` for directories in which the journal files for the daemon database and LS database will be written
  - `/dmf/spool` for directories in which DMF log files are kept
  - `/dmf/tmp` for directories in which DMF puts temporary files for its own internal use
  - *(If used)* `/dmf/backups` for DMF backup files created by DMF backup tasks

You can use the `df(1)` command to verify that the filesystems required for the DMF administrative directories and the DMF-managed filesystems are mounted.

## Determine the Backup Requirements for Your Site

This section discusses the following:

- "Site-Specific Factors to Consider for Backups" on page 18
- "Backup Filesystem and RAID Set Requirements" on page 18
- "Default Backup Policy for DMF and COPAN MAID" on page 19

### Site-Specific Factors to Consider for Backups

The approximate formula for the amount of disk space that you must reserve for backups is:

$$\text{Backup\_Space\_Needed\_Per\_Day} * (\text{Retention\_Period\_In\_Days} + 1) = \text{Reserved\_Space}$$

where *Backup\_Space\_Needed\_Per\_Day* is a factor of:

- The amount of data that is not migrated at the time a backup takes place
- The size of the DMF databases, which is a function of the number of migrated files and the number of DMF copies of each file
- The number of full and/or partial backups to retain, as determined by the frequency of backups and the backup retention period

For more information, see the information about configuring DMF directories appropriately in the "Best Practices" chapter of the DMF administrator's guide, particularly the information about `HOME_DIR` size.

You can allocate the *Reserved\_Space* on a reserved portion of the RAID set that will not be managed by DMF. If you prefer, you could allocate space on physical tapes instead.

### Backup Filesystem and RAID Set Requirements

There are the following requirements:

- The backup filesystem must not be a DMF-managed filesystem.
- The backup filesystem must be visible to the DMF server. In an HA environment, it must be a filesystem that is visible from or can be moved to the active DMF server in the event of a failover.

- If the backups are placed on a RAID set, the RAID set must be owned by the DMF server. For details on configuring a RAID set for backups, see "Format a Shelf for Both DMF and Backups (*Optional*)" on page 30.

### Default Backup Policy for DMF and COPAN MAID

Each sample DMF configuration file for COPAN MAID does the following:

- Writes the backups to disk. The disk can be on a non-DMF region of a RAID set or it can be some existing (non-DMF-managed) filesystem in your environment.

---

**Note:** You can choose to use physical tapes instead if you edit the DMF configuration file.

---

- Performs a full backup once a week (Sundays at 00:00) and a partial backup the remaining days (Monday—Saturday at 00:00), creating backups of all DMF-managed filesystems.
- Causes all of the file data in the DMF-managed filesystems to be migrated before the backups take place (except for files that do not meet the site migration policy).
- Removes the bit-file identifiers from the DMF databases for permanently deleted files.
- Retains the backups for four weeks (28 days). The disk space used by backups is recycled after the retention period is completed.

If you want to change these backup policies, you must modify the DMF configuration file and the procedures in this guide accordingly. For more information, see the DMF administrator's guide.

### Install the DMF Licenses

To install the DMF licenses, copy the DMF license keys into the `/etc/lk/keys.dat` file on the DMF server. For more information, see the chapter about licensing in the DMF administrator's guide.

## Establish OpenVault Communication

If this is a new DMF installation, you must use the `ov_admin(8)` command to do the following, as documented in the chapter about mounting service configuration tasks in *DMF 5 Administrator Guide for SGI InfiniteStorage*:

1. Initially configure the OpenVault server.
2. Configure OpenVault for each parallel data mover node.

---

**Note:** The other sections in that chapter do not apply to a COPAN MAID environment. You will use the instructions later in this guide instead; see "Add the `dmf` Application to OpenVault" on page 38.

---

## Overview of the Steps in this Guide

This guide leads you through the following steps, which you will perform as the `root` user:

1. Select appropriate COPAN cabinet identifiers to be used in the naming convention.
2. Format the RAID sets for each shelf, optionally including non-DMF regions for backups.
3. Create the volumes.
4. Configure OpenVault.
5. Configure DMF and import the DMF volumes into OpenVault.
6. *(Optional)* Configure for HA. See *High Availability Extension and SGI InfiniteStorage*.



---

**Caution:** After your system is configured and running, you should not stop the disks in a COPAN MAID shelf if those disks are currently being used by an OpenVault LCP. First view the output from `dmstat(8)` or `ovstat(8)` to ensure that DMF is not using the disks in that shelf, then stop the OpenVault LCP associated with that shelf, and finally stop the disks. For more information, see the "Best Practices" chapter of the *DMF 5 Administrator Guide for SGI InfiniteStorage*.

---

## Format the RAID sets and Create Volumes

This chapter discusses the following:

- "Selecting Appropriate Cabinet Identifiers" on page 21
- "ov\_copan Command Overview" on page 23
- "Matching Device Names to MAID Shelves" on page 26
- "Formatting the RAID Sets for a Shelf and Creating Volumes" on page 28

### Selecting Appropriate Cabinet Identifiers

This section discusses the following:

- "Cabinet ID Choice" on page 21
- "Cabinet ID Check (*Existing Site Only*)" on page 22

### Cabinet ID Choice

The volume serial numbers (VSNs) for all volumes used by DMF must be unique, whether they are in a library managed by TMF or OpenVault. The following OpenVault component names must also be unique across the site:

- Library names
- Drive names
- Drive groups

When you format the RAID sets on the MAID shelves, the characters you choose for the *CC* component of the VSN naming convention (see "Naming Conventions" on page 13) for each cabinet will also dictate the names that will be chosen for the shelves and the OpenVault components (described in "Summary of the Completed Configuration" on page 14).

You must consider your site's upgrade plans for additional COPAN MAID cabinets and tape libraries when choosing the *CC* component.

### Cabinet ID Check (*Existing Site Only*)

If you have an existing DMF environment, you must also ensure that there will be no conflicts with existing OpenVault components by using the `precheck` feature of the `ov_shelf(8)` command to examine the existing OpenVault VSNs and OpenVault components at your site and report any potential conflicts with the cabinet ID you have chosen:

```
# ov_shelf precheck cabinetID
```

This command will report if any LCP, DCP, or cartridge name collisions would occur with future shelves named with the specified cabinet ID.

If there are no conflicts, no output will appear. For example, to check all of the shelves associated with a cabinet ID of C0 (that is, the eight shelf IDs C00 through C07):

```
# ov_shelf precheck C0
#
```

However, if there are any potential conflicts, `ov_shelf` will report that there are unexpected results. For example, in the following check of the cabinet ID C1, the output shows that there are potential conflicts with an already existing OpenVault library named C13 and already existing drives such as C13d00:

```
# ov_shelf precheck C1
There is an unexpected "C13" LIBRARY record in the openvault database
There is an unexpected "C13@syrah" LCP record in the openvault database
There is an unexpected "C13d00" DRIVE record in the openvault database
There is an unexpected "C13d00@syrah" DCP record in the openvault database
There is an unexpected "C13d01" DRIVE record in the openvault database
There is an unexpected "C13d01@syrah" DCP record in the openvault database
There is an unexpected "C13d02" DRIVE record in the openvault database
There is an unexpected "C13d02@syrah" DCP record in the openvault database
There is an unexpected "C13d03" DRIVE record in the openvault database
There is an unexpected "C13d03@syrah" DCP record in the openvault database
There is an unexpected "C13d04" DRIVE record in the openvault database
There is an unexpected "C13d04@syrah" DCP record in the openvault database
There is an unexpected "C13d05" DRIVE record in the openvault database
There is an unexpected "C13d05@syrah" DCP record in the openvault database
There is an unexpected "C13d06" DRIVE record in the openvault database
There is an unexpected "C13d06@syrah" DCP record in the openvault database
#
```

In this case, you must choose a different cabinet ID and rerun the test.

For example, you could test the cabinet ID M1. Rerun the `ov_shelf` command until no conflicts appear. For example:

```
# ov_shelf precheck M1
#
```

Because the preliminary check of M1 did not show any potential conflicts, you could use it as the cabinet ID naming convention in Chapter 2, "Format the RAID sets and Create Volumes" on page 21.

---

**Note:** If you are also using TMF, you must manually verify that the cabinet ID will not conflict with any VSNs.

---

## ov\_copan Command Overview

This section discusses the following:

- "Run `ov_copan` From the Owner Node" on page 23
- "Format a RAID Set" on page 24
- "Create Volumes" on page 25
- "Display Information" on page 25

For more information, see "Naming Conventions" on page 13 and the `ov_copan(8)` man page.

## Run `ov_copan` From the Owner Node

You must run the `ov_copan(8)` command from the node that you want to own the shelf (the *owner node*). DMF will use the owner node to perform migrations and recalls on that shelf. (In a high-availability environment, ownership is transferred as part of HA failover.)

## Format a RAID Set

When you format a RAID set for DMF use, the formatting process initializes an XFS filesystem on the RAID set.

---

**Note:** This filesystem is reserved exclusively for use with DMF, do not modify it directly.

---

To format the RAID sets:

```
ov_copan format device_or_shelfID [-N shelfID] [-m raidlist] [-t type] [-r reserved_nonDMFsize]
```

where:

- *device\_or\_shelfID* is the device name associated with a shelf (such as `/dev/sg4`), or, after a shelf has been named in `ov_copan`, the shelf identifier (such as `C00`). See "Matching Device Names to MAID Shelves" on page 26.

---

**Note:** You should use the recommended naming convention unless the `ov_shelf precheck` command found potential conflicts, as documented in "Selecting Appropriate Cabinet Identifiers" on page 21.

---

- *shelfID* is the shelf identifier (such as `C00`). You will only use the `-N` option the first time that you format a RAID set for a given shelf.
- *raidlist* is the list of RAID sets on the shelf to be acted upon. By default, all RAID sets are chosen. *raidlist* is a comma-separated list of ranges, such as:

`A,D-F,L-P`

- *type* is the type of formatting, either:
  - `dmf` for DMF-managed filesystems and filesystems for DMF administrative directories (default)
  - `other` for non-DMF regions, such as for backups from the daily DMF backup

If you specify `dmf`, you can choose to reserve a portion of the disk for non-DMF use by specifying `-r` . If you do not specify `-r`, the entire disk is formatted for DMF use.

If you specify `other`, the entire disk is formatted for non-DMF use.

- *reserved\_nonDMFsize* is the amount of the disk to be reserved for non-DMF use. (The *-r* option only applies when the *type* is *dmf*.) By default, no space is reserved for non-DMF use. If you specify *-r*, you must specify a size. You can specify the following units (the default unit is *b*):

*b* = bytes  
*s* = sectors (512 bytes)  
*k* = kilobytes ( $2^{10}$  bytes)  
*m* = megabytes ( $2^{20}$  bytes)  
*g* = gigabytes ( $2^{30}$  bytes)  
*t* = terabytes ( $2^{40}$  bytes)  
*p* = petabytes ( $2^{50}$  bytes)  
*e* = exabytes ( $2^{60}$  bytes)  
*%* = percentage

## Create Volumes

DMF volumes must be at least 512 MB. There can be at most 1,296 DMF volumes in a RAID set. To create DMF volumes on the formatted RAID sets of the specified shelf:

```
ov_copan create shelfID [-m raidlist] [-c count_of_volumes] [-s size_of_volumes]
```

where:

- *count\_of\_volumes* is the number of volumes to create on each of the specified RAID sets. Normally, you specify either *-c* or *-s* but not both.
- *size\_of\_volumes* is the size of volumes to be created (using the same unit specifications as listed above for *reserved\_nonDMFsize*). The value can contain a trailing modifier of "+" or "-", which means to adjust the given size up or down, respectively, in order to use the remaining available space on the RAID set.

For details about the other variables, see "Format a RAID Set" on page 24.

## Display Information

To display summary information for the MAID shelves and RAID sets (LUNs):

```
ov_copan list [device_or_shelfID]  
ov_copan listluns [device_or_shelfID] [-m raidlist]
```

To display more detailed information about RAID sets, volumes, or drives:

```
ov_copan listinfo [device_or_shelfID] [-m raidlist] [-v]
ov_copan listvols [device_or_shelfID] [-m raidlist]
ov_copan listdrives [device_or_shelfID] [-m raidlist]
```

For details about the variables, see "Format a RAID Set" on page 24.

## Matching Device Names to MAID Shelves

To determine the available devices on the COPAN MAID shelves that are visible on the SCSI bus, do the following:

1. Log in to the Platform Service Manager (PSM) GUI, where *ipaddress* is the IP address of the PSM server:

```
http://ipaddress:8180/psmweb/
```

The MAID shelves will be displayed in order from shelf 7 (top) through shelf 0 (bottom), as applicable.

2. Drill down to the shelf details and note the WWPN of both ports on each shelf.

For example, suppose the port numbers for shelf 0 are as follows:

```
Port 0 WWPN: 50:00:ED:5E:35:C3:43:03
Port 1 WWPN: 50:00:ED:5E:35:C3:43:04
```

You will look for numbers similar to the above (but using lowercase and without colon delimiters) in step 4 below. Only one of the port WWPNs will be found, even if both ports are connected to the system, because `ov_copan` chooses one as the primary port.

For more information about PSM, see the *Platform Service Manager Online Help* available from the PSM **Help** menu.

3. On each node in the DMF configuration, use the `list` action to `ov_copan` and note the `sg` devices:

```
# ov_copan list
```

For example, the following output from `node1` shows that there are three shelves (`/dev/sg4`, `/dev/sg71`, and `/dev/sg99`):

```
node1# ov_copan list
LUN Device      Vendor  Product Serial Number      Name      DMF OTH FOR UNF VSNs PB
  0 /dev/sg4     COPANSYS 8814   COPANSYS0000000080900283 ---      0  0  0  26   0 16
  0 /dev/sg71   COPANSYS 8814   COPANSYS0000000063800042 ---      0  0  0  26   0 16
  0 /dev/sg99   COPANSYS 8814   COPANSYS00000000051200018 ---      0  0  0  26   0 16
```

This output also shows that all 26 RAID sets on each shelf are unformatted, and that the power budget (PB) allows 16 RAID sets to have disks spinning at any given time. (*LUN 0* refers to the location of the shelf controller.)

- For each `/dev/sgN` device on each node, obtain its WWPN and match that up with a corresponding shelf WWPN obtained from the PSM by using the `sg_inq(8)` command and searching for the relevant information in the output:

```
# sg_inq --page=0x83 device | grep -A2 "NAA 5"
```

For example, for `/dev/sg4` on `node1`, suppose the output is as follows:

```
node1# sg_inq --page=0x83 /dev/sg4 | grep -A2 "NAA 5"
NAA 5, IEEE Company_id: 0xed5
Vendor Specific Identifier: 0xe35c34303
[0x5000ed5e35c34303]                <<<<<<< WWPN location
```

In this case, the WWPN for `/dev/sg4` is 5000ed5e35c34303.

- Match the device WWPN obtained in step 4 with the shelf WWPN obtained in step 2. For example, the `/dev/sg4` WWPN 5000ed5e35c34303 corresponds to the shelf 0 port 0 WWPN of 50:00:ED:5E:35:C3:43:03. Therefore, in this example, device `/dev/sg4` equates to shelf 0.

## Formatting the RAID Sets for a Shelf and Creating Volumes

This section discusses the following:

- "Format an Entire Shelf for DMF Use" on page 28
- "Format a Shelf for Both DMF and Backups (*Optional*)" on page 30

For more details, see the `ov_copan(8)` man page.



---

**Caution:** Formatting a RAID set will destroy any existing data on that RAID set. The `ov_copan` command will prompt you for confirmation if the operation is about to destroy existing data. When you initially configure DMF and COPAN MAID, this is not an issue because there is no data on the RAID sets.

If there are unrecognized XVM slices on the RAID set, the format operation will fail rather than destroy the data. You must use the `xvm` command to remove any such XVM slices before you can format the RAID set with `ov_copan`.

---

### Format an Entire Shelf for DMF Use

To format an entire shelf for use as DMF secondary storage, do the following:

1. Format all 26 RAID sets for the shelf and name the shelf.

For example, to format all 26 RAID sets for device `/dev/sg4` and name the shelf `C00` (because device `/dev/sg4` equates to MAID shelf 0, as determined in "Matching Device Names to MAID Shelves" on page 26):

```
ownernode# ov_copan format /dev/sg4 -N C00
format /dev/sdj      as C00A fmt DMF
format /dev/sdk      as C00B fmt DMF
format /dev/sdl      as C00C fmt DMF
format /dev/sdm      as C00D fmt DMF
...
```

2. Verify that the RAID sets have been formatted.

For example, the following output shows that device `/dev/sg4` (shelf 0) has the shelf name `C00` and 26 RAID sets that are formatted for DMF:

```
ownernode# ov_copan list
LUN Device      Vendor  Product Serial Number          Name      DMF OTH FOR UNF VSNs PB
  0 /dev/sg4     COPANSYS 8814   COPANSYS0000000080900283 C00      26  0  0  0  0 16
  0 /dev/sg71   COPANSYS 8814   COPANSYS0000000063800042 ---      0  0  0  26  0 16
  0 /dev/sg99   COPANSYS 8814   COPANSYS0000000051200018 ---      0  0  0  26  0 16
```

3. Create DMF volumes on the shelf. The recommended size is 128 GB, specified with a trailing "+" or "-" to allow `ov_copan` to adjust the size to fill all available space in the DMF region. For example:

```
ownernode# ov_copan create C00 -s 128g-
create 40 VSNs of size 126.92g on C00A
create 40 VSNs of size 126.92g on C00B
create 40 VSNs of size 126.92g on C00C
create 40 VSNs of size 126.92g on C00D
...
```

4. Verify that the volumes have been created. For example, the following shows that there are 1,040 volumes on shelf `C00`:

```
ownernode# ov_copan list
LUN Device      Vendor  Product Serial Number          Name      DMF OTH FOR UNF VSNs PB
  0 /dev/sg4     COPANSYS 8814   COPANSYS0000000080900283 C00      26  0  0  0 1040 16
  0 /dev/sg71   COPANSYS 8814   COPANSYS0000000063800042 ---      0  0  0  26  0 16
  0 /dev/sg99   COPANSYS 8814   COPANSYS0000000051200018 ---      0  0  0  26  0 16
```

### Format a Shelf for Both DMF and Backups (*Optional*)

If you want to put DMF backups on a MAID shelf, you must format a portion of a RAID set or an entire RAID set as non-DMF. Which method you choose depends upon the amount of space required for backups, as determined in "Determine the Backup Requirements for Your Site" on page 18. This section discusses the following:

- "Formatting Considerations for Backup" on page 30
- "Dedicate Entire RAID sets for Backups" on page 31
- "Divide a RAID set into DMF and Backup Regions" on page 33

To use physical tapes for DMF backups, see the *DMF 5 Administrator Guide for SGI InfiniteStorage*.

### Formatting Considerations for Backup

If you will store DMF backups on a RAID set, note the following:

- The shelf containing the RAID set must be owned by the DMF server.
- You may format an entire RAID set or reserve just a portion of a RAID set for non-DMF use. When formatting a given RAID set for both DMF and non-DMF use, the DMF region must be at least 200 GB. You must use the `mkfs.xfs(8)` and `xvm(8)` commands to make use of the non-DMF regions.
- The backup task can make multiple copies of the backups (specified by the `DUMP_MIRRORS` parameter in the DMF configuration file). You can choose to increase redundancy by formatting multiple RAID sets to store backups.
- SGI recommends that you leave the backup filesystem unmounted when not in use; the backup task will mount it automatically if it is in `/etc/fstab`.

---

**Note:** If the backup filesystem is always mounted, OpenVault will assume that the RAID set is in use and will throttle DMF's use of the shelf back to avoid going over the power budget. The same is true for any non-DMF RAID set. SGI recommends that you dedicate an entire RAID set for use with DMF.

---

## Dedicate Entire RAID sets for Backups

To dedicate one or more entire RAID sets on a shelf for backups, do the following:

1. Format most of the RAID sets on the shelf for DMF use by using the `-m raidlist` option.

For example, to format the first 25 RAID sets (named from A through Y) of device `/dev/sg71` for DMF use and name the shelf C01 (for cabinet 0, shelf 1):

```
dmfserver# ov_copan format /dev/sg71 -N C01 -m A-Y
format /dev/sdj      as C01A fmt DMF
format /dev/sdk      as C01B fmt DMF
format /dev/sdl      as C01C fmt DMF
format /dev/sdm      as C01D fmt DMF...
```

2. Format the remaining RAID sets entirely as non-DMF for use with backups. For example, to format the one remaining RAID set (Z) as a non-DMF region suitable for backups:

```
dmfserver# ov_copan format C01 -m Z -t other
format /dev/sdab     as C01Z fmt Other
```

3. Verify by viewing the output from the `list` action. For example, the following output shows that for shelf C01, there are 25 RAID sets that are formatted for DMF use and 1 RAID set formatted for other use:

```
dmfserver# ov_copan list C01
LUN Device   Vendor   Product Serial Number      Name      DMF OTH FOR UNF VSNs PB
0 /dev/sg71  COPANSYS 8814    COPANSYS0000000063800042 C01      25  1  0  0  0 16
```

4. Create DMF volumes on most of the RAID sets by using the `-c` or `-s` option. The recommended size is 128 GB, specified with a trailing "+" or "-" to allow `ov_copan` to adjust the size to fill all available space in the DMF region. For example, to create as many 128-GB volumes as will fit on RAID sets A-Y of shelf C01:

```
dmfserver# ov_copan create C01 -s 128g-
create 40 VSNs of size 126.92g on C01A
create 40 VSNs of size 126.92g on C01B
create 40 VSNs of size 126.92g on C01C
```

## 2: Format the RAID sets and Create Volumes

---

```
create 40 VSNs of size 126.92g on C01D
...
skip C01Z: not formatted for DMF...
```

5. Verify that the volumes have been created. For example, the following shows that there are 1,000 volumes on shelf C01:

```
dmfserver# ov_copan list C01
LUN Device      Vendor   Product Serial Number          Name      DMF OTH FOR UNF VSNs PB
0 /dev/sg71    COPANSYS 8814    COPANSYS0000000063800042 C01      25  1  0  0 1000 16
```

6. Create a local-domain XVM slice that covers the whole usable space of the non-DMF RAID set and name the XVM volume that will be used for backups. The physical volume (or *physvol*) will be named with the RAID set identifier:

```
dmfserver# xvm -domain local slice -volname backup_volume_name -all phys/copan_RAID_set_ID
```

For example, to create a slice for the last RAID set in cabinet 0, shelf 1 (which has a *RAID\_set\_ID* of C01Z) and name the backup volume `dmf_backups`:

```
dmfserver# xvm -domain local slice -volname dmf_backups -all phys/copan_C01Z
</dev/lxvm/dmf_backups> slice/copan_C01Zs0
```

For more information, see the `xvm(8)` man page and the *XVM Volume Manager Administrator Guide*.

## 7. Make the filesystem for the backup volume.

For example, to make the filesystem for `dmf_backups` in the `/dev/lxvm` directory:

```
dmfserver# mkfs.xfs /dev/lxvm/dmf_backups
meta-data=/dev/lxvm/dmf_backups  isize=256    agcount=32, agsize=11443303 blks
          =                       sectsz=512   attr=2
data      =                       bsize=4096  blocks=366185696, imaxpct=5
          =                       sunit=0     swidth=0 blks
naming    =version 2              bsize=4096  ascii-ci=0
log       =internal log          bsize=4096  blocks=178801, version=2
          =                       sectsz=512   sunit=0 blks, lazy-count=1
realtime  =none                  extsz=4096  blocks=0, rtextents=0
```

For more information, see the `mkfs.xfs(8)` man page.

## 8. Add the filesystem to `/etc/fstab` with the `noauto` mount option. For example:

```
/dev/lxvm/dmf_backups /dmf/backups xfs defaults,noauto
```

## Divide a RAID set into DMF and Backup Regions

To reserve a portion of one RAID set for backups and allow DMF use on the remainder of that RAID set and all other RAID sets on the shelf, do the following:

1. Format most of the RAID sets on the shelf for DMF use by using the `-m raidlist` option.

For example, to format the first 25 RAID sets (named from A through Y) of device `/dev/sg99` for DMF use and name the shelf C02 (for cabinet 0, shelf 2):

```
dmfserver# ov_copan format /dev/sg99 -N C02 -m A-Y
format /dev/sdj      as C02A fmt DMF
format /dev/sdk      as C02B fmt DMF
format /dev/sdl      as C02C fmt DMF
format /dev/sdm      as C02D fmt DMF...
```

2. Reserve a portion of the remaining RAID sets for backups by using the `-m` and `-r` options.

## 2: Format the RAID sets and Create Volumes

---

For example, to reserve 500 GB for backups of the last RAID set (Z) of shelf C02:

```
dmfserver# ov_copan format C02 -m Z -r 500g
format /dev/sdac      as C02Z fmt DMF
```

3. Verify by viewing the output from the `list` action. For example, the following shows that all 26 RAID sets are formatted at least in part for DMF use:

```
dmfserver# ov_copan list C02
LUN Device      Vendor    Product  Serial Number          Name      DMF OTH FOR UNF VSNs PB
0 /dev/sg99     COPANSYS 8814     COPANSYS0000000051200018 C02      26  0  0  0  0  16
```

4. Create DMF volumes on the DMF-regions of the RAID sets by using the `-c` or `-s` option. The recommended size is 128 GB, specified with a trailing "+" or "-" to allow `ov_copan` to adjust the size to fill all available space in the DMF region. For example, to create as many 128-GB volumes as will fit on RAID sets A-Y and the DMF-region of RAID set Z of shelf 2:

```
dmfserver# ov_copan create C02 -s 128g-
create 40 VSNs of size 126.92g on C02A
create 40 VSNs of size 126.92g on C02B
create 40 VSNs of size 126.92g on C02C
create 40 VSNs of size 126.92g on C02D
...
create 20 VSNs of size 127.48g on C02Z
```

---

**Note:** The size and number of volumes are different for C02Z because the DMF region on that RAID set is smaller.

---

5. Verify by viewing the output from the `list` action. For example:

```
dmfserver# ov_copan list C02
LUN Device      Vendor    Product  Serial Number          Name      DMF OTH FOR UNF VSNs PB
0 /dev/sg99     COPANSYS 8814     COPANSYS0000000051200018 C02      26  0  0  0 1020 16
```

6. Find the sector where the slice will start by examining the output of the `show` action to `xvm`:

```
dmfserver# xvm -domain local show -v phys/copan_RAID_set_ID | grep -A5 "Physvol Usage"
```

For example, for the C02Z RAID set:

```
dmfserver# xvm -domain local show -v phys/copan_C02Z | grep -A5 "Physvol Usage"
Physvol Usage:
Start          Length          Name
-----
0              1880909568     slice/copan_C02Zs0
1880909568    1048576000     (unused)
```

For more information, see the `xvm(8)` man page and the *XVM Volume Manager Administrator Guide*.

7. Create a local-domain XVM slice that begins at the slice location displayed in the previous step and name the XVM volume that will be used for backups. The physical volume (or *physvol*) will be named with the RAID set identifier:

```
dmfserver# xvm -domain local slice -volname backup_volume_name -start sector phys/copan_RAID_set_ID
```

For example, to create a slice for the last RAID set in shelf 2 (which has a *RAID\_set\_ID* of C02Z) beginning at sector 1880909568 and name the backup volume `dmf_backups`:

```
dmfserver# xvm -domain local slice -volname dmf_backups -start 1880909568 phys/copan_C02Z
</dev/lxvm/dmf_backups> slice/copan_C02Zs1
```

8. Make the filesystem for the backup volume. For example:

```
dmfserver# mkfs.xfs /dev/lxvm/dmf_backups
meta-data=/dev/lxvm/dmf_backups isize=256    agcount=16, agsize=8192000 blks
          =                               sectsz=512    attr=2
data      =                               bsize=4096   blocks=131072000, imaxpct=25
          =                               sunit=0      swidth=0 blks
naming    =version 2                       bsize=4096   ascii-ci=0
log       =internal log                    bsize=4096   blocks=64000, version=2
          =                               sectsz=512   sunit=0 blks, lazy-count=1
realtime  =none                             extsz=4096   blocks=0, rtextents=0
```

For more information, see the `mkfs.xfs(8)` man page.

9. Add the filesystem to `/etc/fstab` with the `noauto` mount option. For example:

```
/dev/lxvm/dmf_backups /dmf/backups xfs defaults,noauto
```



## Configure OpenVault

To configure OpenVault for use with COPAN MAID, do the following:

- "Use `ov_shelf` to Configure OpenVault for Each Shelf" on page 37
- "Add the `dmf` Application to OpenVault" on page 38

---

**Note:** The example output for some commands shown here has been edited for length and readability.

---

### Use `ov_shelf` to Configure OpenVault for Each Shelf

You will use the `ov_shelf(8)` command to add the required library control program (LCP), drive control programs (DCPs), and OpenVault drive group for each MAID shelf. From the node that owns the shelf, enter the following command once for each MAID shelf:

```
ownernode# ov_shelf create shelfID
```

For example, if the parallel data mover node `node1` owns shelves 0 and 1, and `node2` owns shelves 2 and 3:

```
node1# ov_shelf create C00
node1# ov_shelf create C01
```

```
node2# ov_shelf create C02
node2# ov_shelf create C03
```

---

**Note:** Before `ov_shelf` takes any action, it verifies that there will be no conflicts with existing volumes at your site. If it detects a potential conflict, it will exit with an error. Because you already verified that there would be no problems by using the `precheck` operation in "Selecting Appropriate Cabinet Identifiers" on page 21, you should not see any errors.

---

## Add the dmF Application to OpenVault

Following is an example of the steps you will take to add an unprivileged and a privileged instance of the dmF application to OpenVault, using an example host named dmFserver as the OpenVault server. The characters ### in the right margin highlight comments related to the steps, which follow the example.

---

**Note:** The ov\_shelf command does some configuration work that would normally be done in ov\_admin, therefore this procedure has fewer steps than what is documented for adding the dmF application in *DMF 5 Administrator Guide for SGI InfiniteStorage*.

---

```
dmfserver# ov_admin ### STEP 1
```

```
Name where the OpenVault server is (or will be) listening? [dmfserver] ### STEP 2
```

```
OpenVault Configuration Menu for server "dmfserver"
```

```
Configuration on Machines Running LCPs and DCPs
```

- 1 - Manage LCPs for locally attached Libraries
- 2 - Manage DCPs for locally attached Drives

```
Configuration on Admin-Enabled Machines
```

- 11 - Manage Cartridge Groups
- 12 - Manage Drive Groups
- 13 - Import Media

```
Configuration on the OpenVault Server Machine
```

- 21 - Manage Applications
- 22 - Manage OpenVault Client Machines

```
q - Exit.
```

```
Which operation would you like to do: 21 ### STEP 3
```

```
Manage Applications Menu
```

- 1 - Create a new Application
- 2 - Delete an Application
- 3 - Show all existing Applications

- 4 - Activate another Application Instance for an existing Application
- 5 - Deactivate an Application Instance
- 6 - Show all activated Application Instances

- r - Return to Main Menu.
- q - Exit.

Which operation would you like to do: 4

### STEP 4

Select the Application for which you want to activate a new Instance

- 1 - dmf
- 2 - ov\_umsh

- r - Return to Previous Menu.
- q - Exit.

Which operation would you like to do: 1

### STEP 5

Enter the name of the Host where an instance of Application "dmf" will run [dmfserver] \* ### STEP 6

Enter the Application's instance name or "\*" [] \* ### STEP 7

Should this Instance of the Application "dmf" be "privileged"? [No] ### STEP 8

What security key will the Application use [none] ### STEP 9

Unprivileged Instance "\*" of Application "dmf"  
was successfully activated on "dmfserver".

Press enter to continue...

Manage Applications Menu

- 1 - Create a new Application
- 2 - Delete an Application

### 3: Configure OpenVault

---

```
3 - Show all existing Applications

4 - Activate another Application Instance for an existing Application
5 - Deactivate an Application Instance
6 - Show all activated Application Instances

r - Return to Main Menu.
q - Exit.
```

Which operation would you like to do: **4** ### **STEP 10**

Select the Application for which you want to activate a new Instance

```
1 - dmf
2 - ov_umsh

r - Return to Previous Menu.
q - Exit.
```

Which operation would you like to do: **1** ### **STEP 11**

Enter the name of the Host where an instance of Application "dmf" will run [dmfserver] \* ### **STEP 12**

Enter the Application's instance name or "\*" [ ] \* ### **STEP 13**

Should this Instance of the Application "dmf" be "privileged"? [No] **yes** ### **STEP 14**

What security key will the Application use [none] ### **STEP 15**

Privileged Instance "\*" of Application "dmf"  
was successfully activated on "dmfserver".

Press enter to continue...

Manage Applications Menu

```
1 - Create a new Application
2 - Delete an Application
3 - Show all existing Applications
```

- 4 - Activate another Application Instance for an existing Application
- 5 - Deactivate an Application Instance
- 6 - Show all activated Application Instances
  
- r - Return to Main Menu.
- q - Exit.

Which operation would you like to do: q

### STEP 16

**Comments:**

1. Log in to the OpenVault server and invoke the OpenVault administration tool `ov_admin(8)`.
2. Enter the name associated with the IP address on which the OpenVault server is listening.
3. Enter 21 to manage applications.
4. Enter 4 to activate another application instance for an existing application.
5. Enter 1 to select `dmf`.
6. Enter the wildcard `*` character to allow the `dmf` application to be used from any host. Alternatively, you can repeat these steps to create a privileged and an unprivileged application instance for each system that DMF runs on (each DMF server and each parallel data mover node).
7. Enter the wildcard `*` character for the application instance name.
8. Use the default `no` to create the unprivileged instance.
9. Optionally provide a security key to prevent unauthorized clients from masquerading as the `dmf` application. SGI recommends that you do this if you used the wildcard in step 6. You must use this same key when later running `dmov_keyfile`.
10. Enter 4 again to activate another application instance for an existing application.
11. Enter 1 to select `dmf`.

12. Enter the wildcard \* character to allow the `dmf` application to be used from any host. (See in step 6.)
13. Enter the wildcard \* character for the application instance name.
14. Enter `yes` to make the application privileged.
15. Optionally provide a security key. (See step 9.)
16. Enter `q` to exit.

For more details, see *OpenVault Operator's and Administrator's Guide*.

## Configure DMF

This chapter describes the minimum steps required to get DMF up and running with a COPAN MAID system. It discusses the following:

- "Configure DMF Parameters" on page 43
- "Provide DMF with the OpenVault Security Keys" on page 53
- "Import the DMF Volumes into OpenVault" on page 54

For more information, see the following:

- *DMF 5 Administrator Guide for SGI InfiniteStorage*
- *DMF 5 Filesystem Audit Guide for SGI InfiniteStorage*
- `dmf.conf(5)` man page

### Configure DMF Parameters

This section discusses the following:

- "Summary of Configuration Parameters" on page 43
- "Configure DMF for a New Site" on page 45
- "Configure COPAN MAID for an Existing DMF Site" on page 49

### Summary of Configuration Parameters

Table 4-1 on page 44 and Table 4-2 on page 44 summarize parameters of particular interest when using COPAN MAID, grouped by the object in the sample file that contains the parameter. For details about setting these parameters appropriately, see the information in *DMF 5 Administrator Guide for SGI InfiniteStorage*.

**Table 4-1** Parameters of Particular Interest for COPAN MAID as Permanent Storage

Sample Object Name	Object Type	Parameter
DMF (shield icon)	base	ADMIN_EMAIL SERVER_NAME
<i>nodename</i>	node	INTERFACE ( <i>Parallel Data Mover option only</i> )
maid_ls	libraryserver	COPAN_VSNS DRIVE_GROUPS
vg_c00 through vg_c07	volume group	MAX_PUT_CHILDREN RESERVED_VOLUMES ZONE_SIZE
mg0 and mg1	migrate group	GROUP_MEMBERS

**Table 4-2** Parameters of Particular Interest for COPAN MAID as Fast-Mount Cache

Sample Object Name	Object Type	Parameter
DMF (shield icon)	base	ADMIN_EMAIL SERVER_NAME
<i>nodename</i>	node	INTERFACE ( <i>Parallel Data Mover Option only</i> )
copan_ls	libraryserver	COPAN_VSNS DRIVE_GROUPS
vg_c00 through vg_c03	volume group	MAX_PUT_CHILDREN MERGE_THRESHOLD RESERVED_VOLUMES ZONE_SIZE
mg_fm	migrate group	GROUP_MEMBERS
fmc_task1 and fmc_task2	task group	FILE_RETENTION_DAYS FMC_MOVEFS FMC_NAME FREE_VOLUME_MINIMUM FREE_VOLUME_TARGET
copan_fm1 and copan_fm2	fastmount cache	CACHE_MEMBERS

## Configure DMF for a New Site

To create the DMF configuration using the DMF Manager graphical user interface, do the following:

1. Start the DMF Manager service:

```
dmfserver# service dmfman start
```

2. Invoke DMF Manager by pointing your browser to the following location:

```
https://your_hostname:1179
```

3. Accept the security certificate.

For more information, see the chapter about using DMF Manager in the DMF administrator's guide. You can use the **Help** button in DMF Manager to access the **Getting Started** information or the entire DMF administrator's guide.

4. Populate DMF Manager with the appropriate sample DMF configuration file . To do this, right-click in the **Overview** panel and select one of the following:

### **Pre-Configured**

> **COPAN MAID LS Sample**

### **Pre-Configured**

> **Fast-Mount Cache Sample**

**COPAN MAID LS Sample** creates the following:

- One library server: `maid_ls`
- Eight drive groups: `dg_c00` through `dg_c07`
- Eight volume groups (VGs): `vg_c00` through `vg_c07`
- Two migrate groups: `mg0` and `mg1`
- The DMF administrative directories, as described in "Create the Directories that DMF Requires" on page 16

**Fast-Mount Cache Sample** creates the following:

- One library server: `copan_ls`
- Two fast-mount caches: `copan_fmcl` and `copan_fmcl2`

- Four COPAN drive groups: `dg_c00` through `dg_c03`
- Four COPAN volume groups: `vg_c00` through `vg_c03`
- One tape library server: `tape_ls`
- Two tape drive groups: `dg1`, and `dg2`
- Four tape volume groups: `vg1a`, `vg1b`, `vg1c`, and `vg2`
- Two migrate groups: `mg0`, `mg_fmc`
- One resource watcher: `rw`
- The DMF administrative directories, as described in "Create the Directories that DMF Requires" on page 16

Depending upon your site-specific configuration, or if you chose a different naming convention ("Selecting Appropriate Cabinet Identifiers" on page 21), you must modify the DMF configuration accordingly.

5. Make the following changes to the sample configuration, based on the configuration at your site:

---


**Note:** This procedure describes the minimum changes you must make. If your configuration differs from the sample configuration, you may need to make more modifications.

---

- a. For each filesystem that DMF will manage, copy and paste the `/dmi_fs` object, renaming it with the actual filesystem name. Right-click the `/dmi_fs` object and select:

**Configure...**  
> **Copy**

In the copy, delete the `/dmi_fs` name and replace it with the name of your filesystem. Figure 4-1 shows an example using the name `/myfs`.

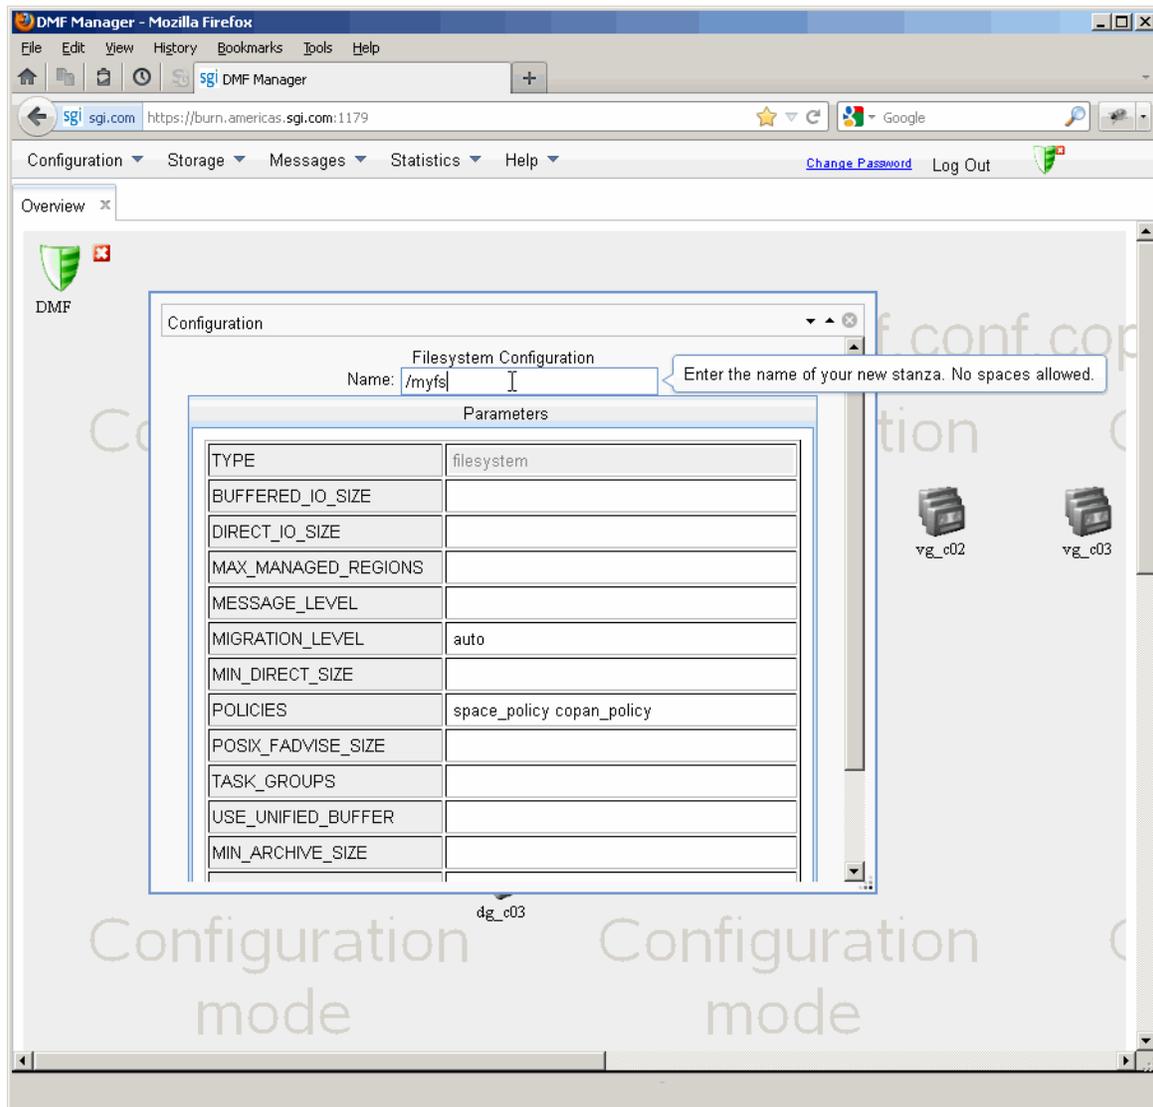

**Figure 4-1** Replace the Filesystem Name

---

**Note:** For help on a parameter, right-click the parameter name.

---

After you have created an object for each filesystem, delete the sample `/dmi_fs` object.

- b. Change the `ADMIN_EMAIL` parameter to an appropriate address for your site. Right-click the DMF shield icon and select:

**Configure ...**  
    **> Modify Base**

Delete the default address and enter in the address for your site. Click **Continue**.

- c. Modify the number of drive groups and volume groups according to the number of COPAN shelves in your configuration. Using the procedures in this guide, there should be one drive group and one volume group per shelf, and the migrate groups should contain a balanced number of volume groups. For example, if you have six shelves (0-5) and you are using COPAN MAID as permanent storage, you would do the following:

- Delete `dg_c06`, `dg_c07`, `vg_c06`, and `vg_c07`
- Edit `maid_ls` and remove `dg_c06` and `dg_c07` from `DRIVE_GROUPS`
- Edit `mg0` to include `GROUP_MEMBERS` of `vg_c00`, `vg_c01` and `vg_c02`
- Edit `mg1` to include `GROUP_MEMBERS` of `vg_c03`, `vg_c04` and `vg_c05`

- d. If you are using the Parallel Data Mover Option:

- Right-click the DMF shield icon and select:

**Configure ...**  
    **> Modify Base**

Set `SERVER_NAME` to the system hostname of your DMF server. Click **Continue**.

- For each node in your DMF configuration, right-click anywhere within the **Overview** panel and select:

**Add Object...**  
**> Node...**

Set the name of the object to the node's system hostname. If you are using alternative networks for DMF communication, set `INTERFACE` appropriately.

6. For fast-mount cache, modify the parameters for the permanent storage target (such as a tape library) as appropriate for your site.
7. Validate your changes. Right-click anywhere within the **Overview** panel and select:

**Configure**  
**> Validate Configuration**

You will see errors about OpenVault and a DMF database, because they are not yet configured:

```
ERROR: No such file /dmf/home/ov_keys.  
ERROR: Database (/dmf/home/maid_ls/tpvrdb.dat) does not exist.
```

The above errors are expected at this point, and you can disregard them. However, if there are any other errors or warnings, fix them and then rerun the validation. Proceed to step 8 when there are no errors and preferably no warnings, other than the expected OpenVault and database errors.

8. Save the configuration. Right-click anywhere within the **Overview** panel and select:

**Configure**  
**> Apply Configuration**

## Configure COPAN MAID for an Existing DMF Site

This section provides an overview of the steps you must take to modify an existing DMF configuration to incorporate COPAN MAID as permanent storage or as a fast-mount cache. For brevity, it describes the changes using examples stanza excerpts from the DMF configuration file. You can edit this file by using DMF Manager.



**Caution:** For instructions about starting and stopping DMF in an HA environment, see *High Availability Extension and SGI InfiniteStorage*.

---

Do the following:

1. Stop DMF:

```
dmfserver# service dmf stop
```

2. Modify the DMF configuration file as follows:

- a. Define a drive group and volume group for each shelf. The names of these objects should be `dg_XXX` and `vg_XXX` respectively, where `XXX` is the lowercase shelf identifier.

For example, for the shelf identifier `c00` for shelf 0 of cabinet `C0`:

```
define dg_c00
    TYPE                drivegroup
    VOLUME_GROUPS        vg_c00
    MOUNT_SERVICE        openvault
    OV_INTERCHANGE_MODES compression
    COMPRESSION_TYPE     snappy
enddef

define vg_c00
    TYPE                volumegroup
    MAX_PUT_CHILDREN    6
    RESERVED_VOLUMES    4
    ZONE_SIZE            4g
enddef
```

---

**Note:** If you are using COPAN MAID as a fast-mount cache, ensure that the names of the `libraryserver`, `drivegroup`, and `volume` objects that define the VGs to be used as a fast-mount cache are the first names listed in `LS_NAMES`, `DRIVE_GROUPS`, and `VOLUME_GROUPS` respectively.

---

Define the `OV_INTERCHANGE_MODE` or `COMPRESSION_TYPE` parameters only if you want to use compression.

- b. Define a new library server, such as `maid_ls`. Adjust `DRIVE_GROUPS` based on the drive groups you added above in step a.

For example:

```
define maid_ls
    TYPE                libraryserver
    CACHE_SPACE         16g
    COMMAND             dmatls
    COPAN_VSNS          ON
    DRIVE_GROUPS        dg_c00 dg_c01 ...
    MAX_CACHE_FILE      1048576
    TASK_GROUPS         ls_tasks
enddef
```

- c. Add the name of the new `libraryserver` object to the `dmdaemon` object. In general, for optimizing recalls, you should list the name of the COPAN MAID `libraryserver` object after any disk `msp` or disk cache manager (DCM) `msp` objects but before any `libraryserver` objects that contain physical tapes.

For example:

```
define daemon
    TYPE                dmdaemon
    LS_NAMES            ... maid_ls ...
    ...
enddef
```

- d. Enable metrics in the base object:

```
define base
    TYPE                base
    ...
    EXPORT_METRICS      ON
enddef
```

The `RESERVED_VOLUMES` parameter (used in `vg_XXX`) requires `EXPORT_METRICS` to be `ON`.

- e. Update the volume group selection policy to include the new shelves using one of the following methods:

- Using a series of volume groups. For example:

```
define vg_policy
    ...
    SELECT_VG                vg_c00 when age < 14
    SELECT_VG                vg_c01
enddef
```

- Using one or more migrate groups to easily spread migrated data across multiple shelves, each containing a list of volume groups. For example:

```
define mg0
    TYPE                    migrategroup
    GROUP_MEMBERS           vg_c00 vg_c01 ...
    ROTATION_STRATEGY      ROUND_ROBIN_BY_BYTES
enddef
```

This method requires that you also define the volume group selection policy. For example:

```
define vg_policy
    ...
    SELECT_VG                mg0
enddef
```

- f. If you are using COPAN MAID as permanent storage and if you do not already have one, add a `taskgroup` object for volume merging (named `ls_tasks` in step 2b above). For example:

```
define ls_tasks
    TYPE                    taskgroup
    RUN_TASK                $ADMINDIR/run_tape_merge.sh at 1:00
    RUN_TASK                $ADMINDIR/run_merge_stop.sh at 3:00
    THRESHOLD               40
enddef
```

g. If you are using COPAN MAID as a fast-mount cache:

- Add a `fastmountcache` object and specify the members of the fast-mount cache. For example:

```
define copan_fmc
    TYPE                fastmountcache
    CACHE_MEMBERS      mg_fmc
enddef
```

- Add a `taskgroup` object to empty the fast-mount cache. For example, the following specifies that when only 10% of the volumes in the fast-mount cache are free, DMF will free the volumes with the oldest write dates until 20% of the volumes are free:

```
define fmc_task
    TYPE                taskgroup
    RUN_TASK            $ADMINDIR/run_fmc_free.sh at 23:00
    FMC_NAME            copan_fmc
    FREE_VOLUME_MINIMUM 10
    FREE_VOLUME_TARGET  20
enddef
```

3. Validate the configuration. You can do this within DMF Manager or use the following command:

```
dmfserver# dmcheck
```

4. Start DMF:

```
dmfserver# service dmf start
```

## Provide DMF with the OpenVault Security Keys

If this is a new site, do the following to allow DMF to communicate with OpenVault:

```
dmfserver# dmov_keyfile
What is the unprivileged key? [none] unpriv_key
What is the privileged key? [none] priv_key
```

If you did not configure keys, press `Enter` to use the default value of `none`.

## Import the DMF Volumes into OpenVault

Do the following to import the DMF volumes into OpenVault:

1. Import the volumes for the library by type into OpenVault and add them to DMF according to the DMF volume group (VG) name (such as `vg_c00` for library `C00`) by entering the following `dmov_loadtapes(8)` command, once per shelf:

```
dmfserver# dmov_loadtapes -t Copan-MAID -l OV_library_name -s volumesize_in_bytes VGname
```

This command will invoke an editor session. If there are any volumes that you do not want added to the library server database, you should delete those VSNs from the list. Otherwise, you should exit the editor.

For example, you would enter `C00` (the library name), `vg_c00` (the corresponding VG name), and `128000000000` (for 128 GB):

```
dmfserver# dmov_loadtapes -t Copan-MAID -l C00 -s 128000000000 vg_c00
...
(editor session is invoked)
Unused tapes in library C00.
Delete any you do not wish to use for allocation or volume group vg_c00.
C00AAA
C00BAB
C00CAC
...
(exit the editor session)
...
(wait a few moments for the process to complete)
...
Loading tapes into allocation/volume group vg_c00.
Creating Copan-MAID cartridges in cartgroup carts for vg_c00.
```

The volumes for the library are now imported and ready for use. A volume that has been imported into OpenVault can be referred to as a *tape volume*.

2. Verify that the volumes now have OpenVault cartridge IDs assigned to them by examining the output from the following command:

```
dmfserver# ov_stat -L OV_library_name -s
```

For example, the following output shows that the volume with VSN `C00AAA` now has an OpenVault cartridge ID of `ooA69kzOtNYADeH5`:

```
dmfserver# ov_stat -L C00 -s
```

```
Library Name  Broken  Disabled  State    LCP State
C00           false   false     ready    ready
Library: 'C00'
```

```
Library  Slot Name  Slot Type  Occupied PCL    Cart ID
C00      slot 1000  LTO        true    C00AAA  ooA69kzOtNYADeH5
C00      slot 1001  LTO        true    C00BAB  ooA69kzOtNcAATXk
C00      slot 1002  LTO        true    C00CAC  ooA69kzOtNcAAwqN
...
C00      slot 1675  LTO        true    C00ZT1  ooA69kzOtSkAAQGF
C00      slot 1676  LTO        true    C00AT2  ooA69kzOtSkAAtZU
C00      slot 1677  LTO        true    C00BT3  ooA69kzOtSkABKsZ
```

```
Library  Bay Name  Slot Type  Total Slots  Free Slots
C00      bay 1     DLT        0             0
```

- Verify that the volumes are available for DMF to use in the appropriate shelf volume group using the following `dmvoladm(8)` command:

```
dmfserver# dmvoladm -l libraryserver -c "list all and vg=VGnames"
```

For example:

```
dmfserver# dmvoladm -l maid_ls -c "list all and vg=vg_c00"
```

VSN	VOLGRP	LB	DATA LEFT	WRITTEN	CHUNK	ZONE	HFLAGS	DATA AGE	EOT	EOT	WR/FR
C00A00	vg_c00	al	0.000000	0.000000				1	1	-----	16m
C00A02	vg_c00	al	0.000000	0.000000				1	1	-----	16m
...											
C00Z08	vg_c00	al	0.000000	0.000000				1	1	-----	16m
C00Z09	vg_c00	al	0.000000	0.000000				1	1	-----	16m



## Test the DMF System

This chapter describes how to test the DMF system:

- "Test that OpenVault Can Mount a Migration Volume" on page 57
- "Validate the DMF Configuration" on page 57
- "Enable Audits of the DMF-Managed Filesystems" on page 59
- "Test the DMF Configuration" on page 63

### Test that OpenVault Can Mount a Migration Volume

To test that OpenVault can mount a volume from a library for the `dmf` application, enter the following `ov_mount(8)` command:

```
dmfserver# ov_mount -A dmf -v VSN
```

For example, to test that OpenVault can mount the volume with the VSN `C00BAB` and then exit:

```
dmfserver# ov_mount -A dmf -v C00BAB
Mounted C00BAB on /var/opt/openvault/clients/handles//tEyedOqkcssi
dmfserver# exit
exit
```

Repeat the steps in this section for each MAID shelf.

### Validate the DMF Configuration

To verify the DMF configuration after the volumes have been created and imported into OpenVault, repeat the validation check in DMF Manager (as in step 7 of Chapter 4, "Configure DMF" on page 43) by right-clicking anywhere within the **Overview** panel and selecting:

```
Configure
> Validate Configuration
```

## 5: Test the DMF System

---

You could instead run the `dmcheck(8)` command on the DMF server, which provides similar functionality. There should not be any errors or warnings. For example:

```
dmfserver# dmcheck -h

Checking DMF installation.
Linux dmfserver 2.6.32.45-0.3-default #1 SMP 2011-08-22 10:12:58 +0200 x86_64 x86_64 x86_64 GNU/Linux - dmfserver
SuSE-release: SUSE Linux Enterprise Server 11 (x86_64)
SuSE-release: VERSION = 11
SuSE-release: PATCHLEVEL = 1
sgi-issp-release: SGI InfiniteStorage Software Platform, version 2.4, Build 704r10.sles11-1104042004
sgi-foundation-release: SGI Foundation Software 2.4, Build 704rp10.sles11-1104242013
lsb-release:
LSB_VERSION="core-2.0-noarch:core-3.2-noarch:core-4.0-noarch:core-2.0-x86_64:core-3.2-x86_64:core-4.0-x86_64"
DMF version 5.5.0 rpm dmf-5.5.0-sgi250a74.sles11 installed.

Checking DMF config file
Scanning for non-comment lines outside define/endif pairs
Scanning for DMF parameters without values
Checking all objects for invalid names
Checking base
Checking daemon
Checking policy space_policy
Checking policy copan_policy
Checking filesystem /dmi_fs
Checking Library Server maid_ls
Checking Drive Group dg_c00
Checking Drive Group dg_c01
Checking Volume Group vg_c00
Checking Volume Group vg_c01
Checking Migrate Group mg0
Checking selection rules in policy space_policy.
Checking selection rules in policy copan_policy.
Checking Task Group daemon_tasks
Checking Task Group dump_tasks
Checking Task Group ls_tasks
Checking for unreferenced objects

Checking Task Group ls_tasks
Checking for unreferenced objects
Cross-checking LSs and task groups for duplicate VSNs
```

```
Checking other daemons.  
Checking OpenVault  
Checking chkconfig  
WARNING: ts is disabled by chkconfig
```

```
No errors found.  
No warnings found
```

If there are any errors or warnings, fix them and then rerun the validation. For more information, see the *DMF 5 Administrator Guide for SGI InfiniteStorage*.

## Enable Audits of the DMF-Managed Filesystems

The DMF configuration file for COPAN MAID performs a nightly audit at 23:00 to check for database consistencies. To enable these audits of the DMF-managed filesystems, you must initialize the `dmaudit(8)` working environment. For more information about `dmaudit`, see *DMF 5 Filesystem Audit Guide for SGI InfiniteStorage*.

For example, on DMF server `dmfserver` (the characters `###` in the right margin highlight comments related to the steps below):

```
dmfserver# service dmf start                                     ### STEP 1  
  
dmfserver# dmaudit                                             ### STEP 2
```

This program must create a working directory named `'working_dir'` to hold several very large work files. The files may be needed in subsequent executions of this program, so the directory should be placed in a file system that is not cleared frequently.

Please enter the full path name of an existing directory in which subdirectory `'working_dir'` can be created (<CR> to quit): `/dmf/home`

You must select the file systems to be scanned when this program searches for migrated files. By default the list contains all file systems currently mounted.

IF THERE ARE ANY FILE SYSTEMS CONTAINING MIGRATED FILES THAT DO NOT APPEAR IN THIS LIST, EXIT THIS PROGRAM AND MOUNT THEM BEFORE CONTINUING!!!

## 5: Test the DMF System

---

Failure to do so could mean the loss of the data in those files, because this program sometimes removes database entries if it cannot find matching migrated files for them. File systems that you are sure do not contain migrated files may be removed from this list to speed execution. Remember that using restore to load files dumped from a DMF-configured file system can result in migrated files in other file systems. If there is any question whether a file system contains migrated files, leave it in the list.

Select:

```
<view>      View the current file system scan list
<edit>      Edit a fresh copy of the file system scan list
<accept>    Accept the current file system scan list
<quit>     Quit
```

Please enter your selection: **edit**

### **STEP 3**

```
/dmf/move
/dmf_fs
```

*Delete /dmf/move*

### **STEP 4**

```
/dmi_fs
```

Select:

```
<view>      View the current file system scan list
<edit>      Edit a fresh copy of the file system scan list
<accept>    Accept the current file system scan list
<quit>     Quit
```

Please enter your selection: **accept**

### **STEP 5**

MAIN MENU

-----

Select:

```
<snapshot>  Take a snapshot and report status of file systems and databases
<config>    Examine or modify configuration information
<quit>     Quit
```

Please enter your selection: **snapshot**

### **STEP 6**

## DAEMON DATABASE ERROR REPORT

-----

No errors were discovered comparing the file systems against the daemon database.

## DATA MIGRATION CONFIGURATION

-----

Data migration home directory:            /dmf/home  
 Data migration binaries directory:        /usr/sbin

Server name:                                daemon  
 Server home directory:                    /dmf/home/daemon  
 Server spool directory:                   /dmf/spool/daemon

Data migration daemon process ID:        19275

No MSPs are configured

Name	Type	
-----	-----	
maid_ls	dmatls	
vg_c00	volume group	in Library Server maid_ls
vg_c01	volume group	in Library Server maid_ls
vg_c02	volume group	in Library Server maid_ls
vg_c03	volume group	in Library Server maid_ls
vg_c04	volume group	in Library Server maid_ls
vg_c05	volume group	in Library Server maid_ls
vg_c06	volume group	in Library Server maid_ls
vg_c07	volume group	in Library Server maid_ls
mg0	migrate group	Group Members: vg_c00
mg1	migrate group	Group Members: vg_c01

## LIST OF FILE SYSTEMS SCANNED

-----

/dmf\_fs    xfs

MAIN MENU

-----

Select:

```
<inspect>   Inspect and correct file system and database errors
<report>    Reprint status report for the current snapshot
<verifymsp> Check the dmatls tape library server databases against the
            daemon databases
<snapshot>  Take a snapshot and report status of file systems and
            databases
<free>      Release all file space used by the current snapshot
<config>    Examine or modify configuration information
<quit>      Quit
```

Please enter your selection: **quit**

**### STEP 7**

**Comments:**

1. Start the DMF service:

```
dmfserver# service dmf start
```

2. Run the `dmaudit(8)` command to verify the filesystems:

```
dmfserver# dmaudit
```

In particular, set up the file system scan list and run a simple snapshot.

3. Enter `edit` to edit a fresh copy of the filesystem scan list.
4. Delete the `/dmf/move` filesystems, leaving just your DMF-managed filesystem (such as `/dmf_fs`).
5. Enter `accept`.
6. Enter `snapshot`.
7. Enter `quit`.

## Test the DMF Configuration

To test the completed DMF configuration, do the following from the DMF server:

1. Change to a DMF-managed filesystem directory and create a test file of at least 1 MB. For example, to create the file `mytestfile` in the filesystem `/dmi_fs`:

```
# cd /dmi_fs
# /usr/lib/dmf/support/dmtwf -l 1m mytestfile
```

2. Compute the checksum of the test file by using the `cksum(1)` command. For example:

```
# cksum mytestfile
3368297266 1000000 mytestfile
```

3. Migrate the file and release its data blocks after the offline copies are made by using the `dmpu(1)` command:

```
# dmpu -r mytestfile
```

4. Idle the DMF daemon so that the `dmpu` request will take place immediately by using the `dmdidle(8)` command:

```
# dmdidle
```

5. List the progressing status of the file by executing the `dmls(1)` command multiple times:

```
# dmls -l
```

For example, the following repeated execution of `dmls` shows that `mytestfile` moves from migrating (MIG) to offline (OFL):

```
# dmls -l
total 980
-rw-r--r-- 1 root      root      1000000 2010-11-05 12:36 (MIG) mytestfile
#
# dmls -l
total 980
-rw-r--r-- 1 root      root      1000000 2010-11-05 12:36 (OFL) mytestfile
```

6. Retrieve the file by using the `dmget(1)` command:

```
# dmget mytestfile
```

7. Use `dmls` again to show that the file is now dual-state (DUL):

```
# dmls -l
total 980
-rw-r--r-- 1 root      root      1000000 2010-11-05 12:36 (DUL) mytestfile
```

8. Verify that the checksum on the file has not changed:

```
# cksum mytestfile
3368297266 1000000 mytestfile
```

9. Delete the test file. For example:

```
# rm mytestfile
```

## Maintenance Tasks

This chapter discusses the following:

- "Deleting a Volume from a RAID set" on page 65
- "Unformatting a RAID set" on page 67
- "Adding a COPAN MAID Cabinet or Shelf" on page 69
- "Verifying the OpenVault Components for a MAID Shelf" on page 69
- "Updating OpenVault Components After a Power Budget Change" on page 70
- "Removing OpenVault Components" on page 70
- "Stopping OpenVault Components" on page 71

### Deleting a Volume from a RAID set

To delete a volume from a RAID set, do the following:

1. Determine if the volume has any data on it by executing the `dmvoladm(8)` command on the DMF server and examining the output for the `DATA LEFT` column:

```
dmvoladm -l libraryserver_name -c "list VSNlist"
```

For example, the following shows that C00A00 has data but C00A01 does not:

```
dmfserver# dmvoladm -l maid_ls -c "list C00A00-C00A01"
```

VSN	VOLGRP	LB	DATA LEFT	DATA WRITTEN	EOT CHUNK	EOT ZONE	HFLAGS	WR/FR AGE
C00A00	vg_c00	a1	4847.408715	14932.408715	9	5	-----	3d
C00A01	vg_c00	a1	0.000000	5500.000000	4	3	-----	7d

Database was not modified.

If the volume is empty, skip to step 3.

2. If the volume has data on it, do the following on the DMF server:

a. Flag the volume as sparse:

```
dmfserver# dmvoladm -l LCPname -c "update VSN to hsparse on hro on"
```

For example:

```
dmfserver# dmvoladm -l maid_ls -c "update C00A00 to hsparse on hro on"
Updated 1 record.
```

b. Verify the flag settings, which should show *r* and *s*. For example:

```
dmfserver# dmvoladm -l maid_ls -c "list C00A00"
```

VSN	VOLGRP	LB	DATA LEFT	DATA WRITTEN	EOT CHUNK	EOT ZONE	HFLAGS	WR/FR AGE
C00A00	vg_c00	a1	4847.408715	4847.408715	9	5	---r---s-	3d

c. Wait for the library server to merge data off the volume. This will take some time, depending on the amount of data on the volume and the number of available drives. Repeat step 1 until there is no data left on the VSN.

---

**Note:** If the volume is damaged and the merge fails, use the `dmemptytape(8)` command to attempt to recover as much data as possible from the volume.

---

3. Delete the empty volume from the DMF database:

```
dmfserver# dmvoladm -l LCPname -c "delete VSN"
```

For example, for VSN C00A01:

```
dmfserver# dmvoladm -l maid_ls -c "delete C00A01"
Deleted 1 record.
```

4. Delete the empty volume from the OpenVault database by using the `ov_vol(8)` command from the OpenVault server:

```
dmfserver# ov_vol -D -a dmf -v VSN
```

For example, if `dmfserver` is the OpenVault server:

```
dmfserver# ov_vol -D -a dmf -v C00A00
Volume deleted:
  volume name = 'C00A00', application name = 'dmf'
  cartridgeID = 'ooBC9k53kkIADV25', side = 'SideA', partition = 'PART 1'
```

Take note of the cartridge ID number for this VSN, which you will use in the following step.

5. Purge the cartridge ID from the OpenVault database by executing the `ov_purge(8)` command from the OpenVault server:

```
dmfserver# ov_purge -C 'CartridgeID'
```

For example, step 4 above shows that the cartridge ID for VSN C00A00 is ooBC9k53kkIADV25:

```
dmfserver# ov_purge -C 'ooBC9k53kkIADV25'
```

```
Are you sure you want to purge all information for cartridge with
cartridge ID = ooBC9k53kkIADV25 (Y/N)? y
Deleted partition PART 1
Deleted cartridge ooBC9k53kkIADV25
```

6. Delete the volume from a formatted RAID set by executing the `delete` operation of the `ov_copan` command on the node that owns the shelf:

```
ov_copan delete VSN
```

For example, if `node1` owns shelf C00, to delete the volume with VSN C00A00:

```
node1# ov_copan delete C00A00
delete VSNs on C00A
```

## Unformatting a RAID set

After you delete all of the volumes on a RAID set (see "Deleting a Volume from a RAID set" on page 65), you can unformat the RAID set to remove all label and GPT partition information.



---

**Caution:** Unformatting a RAID set will destroy all data on that RAID set. By default, the `unformat` operation will ask you to confirm the action if it is about to destroy existing data.

If there are unrecognized XVM slices on the RAID set, the `unformat` operation will fail rather than destroy the data. You must remove any such XVM slices manually using `xvm(8)` before unformatting the RAID set with `ov_copan`.

---

Enter the following:

```
# ov_copan unformat device_or_shelfID [-m raidlist]
```

For example, to unformat all RAID sets on shelf 1:

```
# ov_copan unformat C01
Device C01A is a DMF partition with 40 VSNS
Continuing will destroy existing data.
Continue (y or n)? y
Device C01B is a DMF partition with 40 VSNS
Continuing will destroy existing data.
Continue (y or n)? y
...
unformat C01A
unformat C01B
...
```

For example, to unformat RAID sets W and X on shelf 1:

```
ownernode# ov_copan unformat C01 -m W,X
Device C01W is a DMF partition with 40 VSNS
Continuing will destroy existing data.
Continue (y or n)? y
Device C01X is a DMF partition with 40 VSNS
Continuing will destroy existing data.
Continue (y or n)? y
unformat C01W
unformat C01X
```

## Adding a COPAN MAID Cabinet or Shelf

Before you add a new COPAN MAID cabinet or additional shelves to your environment, you should verify that there are no existing OpenVault components that will conflict with the new shelf IDs you want to use. Do the following:

- If adding a new cabinet:

```
# ov_shelf precheck newcabinetID
```

For example, to check a cabinet ID of C1:

```
# ov_shelf precheck C1
```

- If adding a new shelf to an existing cabinet:

```
# ov_shelf precheck newshelfID
```

For example, to check a shelf ID of C07:

```
# ov_shelf precheck C07
```

For more details, see "Selecting Appropriate Cabinet Identifiers" on page 21.

## Verifying the OpenVault Components for a MAID Shelf

To verify the existing OpenVault components for a formatted MAID shelf, enter the following from the node that owns the shelf:

```
ownernode# ov_shelf check shelfID
```

For example, if node1 owns shelf C07 and there are no errors, there will be no output:

```
node1# ov_shelf check C07  
node1#
```

If there are errors, you may need to update the OpenVault configuration. See "Updating OpenVault Components After a Power Budget Change" on page 70.

## Updating OpenVault Components After a Power Budget Change

If you increase or decrease the power budget, run the following command to update the OpenVault components:

```
ownernode# ov_shelf update shelfID
```

## Removing OpenVault Components

If you want to remove the OpenVault components for a shelf, execute the following command from the node that owns the shelf:

```
ownernode# ov_shelf delete shelfID
```

To also delete any cartridge records cartridge/partition/volume/side records, include the `-c` option:

```
ownernode# ov_shelf -c delete shelfID
```

Removing these records can be time-consuming. The `ov_shelf` command will report its progress by printing a dot character every few seconds. For example:

```
ownernode# ov_shelf -c delete C01  
.....
```

If the command is successful, there will be no other output.

## Stopping OpenVault Components

To stop all of the local LCPs and DCPs, and the OpenVault server (if running on the server node): <sup>1</sup>

```
dmfserver# service openvault stop
Stopping OpenVault ...
OpenVault stopped
```

To stop individual LCPs or DCPs, run `ov_admin` on the owner node and use the relevant menu selections:

```
ownernode# ov_admin

Name where the OpenVault server is listening? [dmfserver]

OpenVault Configuration Menu for server "dmfserver"

Configuration on Machines Running LCPs and DCPs
  1 - Manage LCPs for locally attached Libraries
  2 - Manage DCPs for locally attached Drives

...
```

For more information, see the `ov_admin(8)` man page.

---

<sup>1</sup> For instructions about starting and stopping services in an HA environment, see *High Availability Extension and SGI InfiniteStorage*.



## Troubleshooting

This chapter discusses the following:

- "Repairing OpenVault Components" on page 73
- "Unable to Delete a Volume" on page 73

### Repairing OpenVault Components

If you accidentally delete an OpenVault component, you can repair the damage by updating the OpenVault component information for the shelf:

```
ownernode# ov_shelf update shelfID
```

### Unable to Delete a Volume

If you try to delete a volume that contains data, you will get an error message. For example:

```
dmfserver# dmvoladm -l maid_ls -c "delete C00A00"  
delete: VSN C00A00 ignored - usage is not zero.  
Database was not modified.
```

You must flag the volume as sparse in order to cause DMF to move the data to a new volume before you can delete it. See "Deleting a Volume from a RAID set" on page 65.



---

## Glossary

ADMIN\_EMAIL

The e-mail address to receive output from administrative tasks.

### **administrative directories**

See *DMF administrative directories*.

AGE\_WEIGHT

A floating-point constant and floating-point multiplier used to calculate the weight given to a file's age (for MSP/VG user filesystem).

### **AOR**

The *always on region*, a section of COPAN MAID disk that will always be spinning and available for access. This region is not used by DMF.

base **object**

The configuration file object that defines pathname and file size parameters necessary for DMF operation.

### **bit-file identifier**

(BFID) A unique identifier, assigned to each file during the migration process, that links a migrated file to its data on alternate media.

### **block**

Physical unit of I/O to and from media, usually tape. The size of a block is determined by the type of device being written. A block is accompanied by a header identifying the chunk number, zone number, and its position within the chunk.

CACHE\_DIR

The directory in which the VG stores chunks while merging them from sparse volumes.

CACHE\_MEMBERS

The single VG or one or more MGs to be used as a fast-mount cache.

**chunk**

That portion of a user file that fits on the current media volume. Most small files are written as single chunks. When a migrated file cannot fit onto a single volume, the file is split into chunks.

**configuration file object**

A series of parameter definitions in the DMF configuration file that controls the way in which DMF operates. By changing the parameters associated with objects, you can modify the behavior of DMF.

**configuration parameter**

A string in the DMF configuration file that defines a part of a configuration object. By changing the values associated with these parameters, you can modify the behavior of DMF. The parameter serves as the name of the line. Some parameters are reserved words, some are supplied by the site.

**configuration stanza**

A sequence of configuration parameters that define a configuration object.

**COPAN MAID**

Power-efficient long-term data storage solution based on an enterprise massive array of idle disks (MAID) platform.

**COPAN VTL**

Power-efficient long-term data storage solution based on an enterprise MAID platform using a virtual tape library (VTL).

COPAN\_VSNS

A parameter that specifies that the fourth character of the volume serial number (VSN) indicates the RAID in the COPAN VTL or COPAN MAID that contains the VSN. This specification applies for all VSNs in this library server.

**daemon**

A program that is run automatically by the system for a specific purpose.

**daemon database**

A database maintained by the DMF daemon.

**DATABASE\_COPIES**

One or more directories into which a copy of the DMF databases will be placed.

**DG**

See *drive group*.

**DMF administrative directories**

The directories in which DMF stores databases, log files, journal files, and temporary files. The DMF configuration file specifies these directories using the following parameters:

HOME\_DIR  
JOURNAL\_DIR  
SPOOL\_DIR  
TMP\_DIR  
MOVE\_FS  
CACHE\_DIR  
STORE\_DIRECTORY

**DMF daemon**

The program that accepts requests to migrate data, communicates with the operating system kernel in order to maintain a file's migration state, determines the destination of migrated data, and requests the return of offline copies.

**DMF server**

A node running the required DMF server software that provides DMF administration, configuration, and data mover functionality. (When using the Parallel Data Mover Option, data mover functionality is optional on the DMF server.)

**drive**

A hardware device that reads and writes data.

**drive group**

One of the components of an LS. The drive group is responsible for the management of a group of interchangeable drives located in the library. These drives can be used by multiple VGs and by non-DMF processes, such as backups and interactive users. However, in the latter cases, the drive group has no management involvement; the OpenVault mounting service is responsible for ensuring that these possibly competing uses of the drives do not interfere with each other. The main tasks of the drive group are to monitor I/O for errors, to attempt to classify them (as volume, drive, or mounting service problems), and to take preventive action.

**dual-state file**

A file whose data resides both online and offline.

**DUMP\_FILE\_SYSTEMS**

One or more filesystems to back up. If not specified, the tasks will back up all the DMF-managed user filesystems configured in the configuration file.

**DUMP\_MIRRORS**

One or more directories in which to place a copy of disk-based backups.

**fast-mount cache**

A migration target with fast mount/position characteristics (such as COPAN MAID) that is used in conjunction with another permanent storage target (such as physical tape). Data copies are placed on the fast-mount cache and the permanent storage target at the time of initial migration.

**file**

An inode and its associated data blocks; an empty file has an inode but no data blocks.

**FILE\_RETENTION\_DAYS**

The age (in days) of a file that must not be deleted from the fast-mount cache.

**FMC\_MOVEFS**

The specific scratch `MOVE_FS` directory to be used when moving files to be retained in the fast-mount cache.

**FREE\_VOLUME\_MINIMUM**

The minimum percentage of free volumes in the COPAN MAID or COPAN VTL fast-mount cache that will cause `run_fmc_free.sh` to begin freeing full volumes in order to meet the percentage set for `FREE_VOLUME_TARGET`.

**FREE\_VOLUME\_TARGET**

The percentage of volumes in the COPAN MAID or COPAN VTL fast-mount cache that `run_fmc_free.sh` tries to free when the `FREE_VOLUME_MINIMUM` threshold is reached.

**HA**

High availability

**HAE**

SUSE Linux Enterprise High Availability Extension

**HOME\_DIR**

The base pathname for directories in which DMF databases and related files reside.

**inode**

The portion of a file that contains the bit-file identifier, the state field, and the data pointers.

**LCP**

Library control program

**library server**

A daemon-like process by which data blocks are copied onto a volume and that maintains the location of the migrated data. An LS can be configured to contain one or more drive groups. Each drive group contains one or more VGs. A VG is

responsible for copying data blocks onto alternate media. A VG is capable of managing a single copy of a user file.

**LS**

See *library server*.

**LS database**

The database containing catalog and volume records associated with a library server (LS).

**MAID**

Massive array of idle disks.

**managed filesystem**

A DMAPI-mounted XFS or CXFS filesystem, configured in a `filesystem` object in the DMF configuration file, on which DMF can migrate or recall files. (When using the Parallel Data Mover Option, it must be CXFS.)

**MAX\_PUT\_CHILDREN**

The maximum number of write child (`dmawc`) processes that will be simultaneously scheduled for the VG.

**merging**

See *volume merging*.

**MERGE\_THRESHOLD**

The integer percentage of active data on a volume less than which DMF will consider a volume to be sparse and allow merging, which should be 0 for a `volume` group that is part of a fast-mount cache.

**migrated file**

A file that has one or more complete offline copies and no pending or incomplete offline copies.

**migrate group**

A logical collection of VGs that you combine into a set in order to have a single destination for a migrate request.

**MULTIPLIER**

The amount of data to be sent to a group member relative to the other members.

**offline file**

A file whose inode contains a bit-file identifier but whose disk blocks have been removed. The file's data exists elsewhere in copies on alternate media.

**OpenVault**

A storage library management facility that improves how applications can manage, store, and retrieve removable media.

**owner node**

The node that DMF will use to perform migrations and recalls on a given shelf. The node on which you run `ov_copan` becomes the owner node for that shelf. In an HA environment, ownership is transferred as part of HA failover.

**parallel data mover node**

A node, installed with DMF data mover software and underlying CXFS client-only software, that provides dedicated data mover functionality in addition to the DMF server, increasing data throughput and enhancing resiliency.

**Parallel Data Mover Option**

Optional software and licenses available for purchase that allow you to run parallel data mover nodes in order to increase data throughput and enhance resiliency.

**parameter**

See *configuration parameter*.

**power budget**

The maximum number of RAID sets that can be powered on at any one time.

**RAID**

Redundant array of independent disks.

**RAID set**

A group of 3 data disks and 1 parity disk on a MAID shelf.

**RAID-set identifier**

The first four characters of a VSN (which uniquely identifies a specific RAID set within a specific MAID shelf on a specific COPAN cabinet) that can be used as an argument to some OpenVault commands.

**resource agent**

The software that allows an application to be highly available without modifying the application itself.

**shelf identifier**

The first three characters of a VSN (which uniquely identifies a specific MAID shelf on a specific COPAN cabinet) that can be used as an argument to some OpenVault commands.

**recall**

To request that a migrated file's data be moved back onto the filesystem disk, either by explicitly entering the `dmget(1)` command or by executing another command that will open the file, such as the `vi(1)` command.

**sparse volume**

A volume containing only a small amount of active data.

**task**

A process initiated by the DMF event mechanism. Configuration tasks that allow certain recurring administrative duties to be automated are defined with configuration file parameters.

**VG**

See *volume group*

**volume group**

A component of an LS that is responsible for managing a pool of volumes that are capable of storing single copies of user files. Multiple copies of the same user files require the use of multiple VGs. See also *LS*.

**volume merging**

The mechanism provided by the LS for copying active data from volumes that contain largely obsolete data to volumes that contain mostly active data. Volume merging is not appropriate for a fast-mount cache.

**volume serial number**

A label that uniquely identifies a specific volume.

**VSN**

Volume serial number.

**write child**

A data mover process that migrates data to secondary storage.

**zone**

A logical grouping of chunks. Zones are separated by file marks and are the smallest block-addressable unit on the tape volume. The target size of a zone is configurable by media type.

**ZONE\_SIZE**

The parameter that specifies about how much data the write child should put in a zone.



---

# Index

## A

- ADMIN\_EMAIL, 48
- always on region, 16
- AOR, 11, 16
- application instance names, 42
- archiving concept, 5
- archiving overview, 5
- audits, 59

## B

- backup filesystem and RAID set requirements, 18
- backup filesystem mount state, 30
- backup policy, 19
- backup requirements, 18
- backup space needed per day, 18
- backups, 12
- backups and shelf formatting, 30
- base object, 51
- best practices, 17

## C

- cabinet addition, 69
- cabinet ID check, 22
- cabinet ID choice, 21
- cabinet identifier, 13
- CC cabinet identifier, 13
- CCS shelf identifier, 13
- CCSR RAID-set identifier, 13
- CCSRVV naming convention, 13
- cksum, 63
- COMPRESSION\_TYPE, 50
- configuration summary, 14

- COPAN cabinet, 2

## D

- DCP, 14
- delete a shelf from OpenVault, 70
- delete OpenVault components, 70
- device name mapping to MAID shelves, 26
- df, 17
- dg\_c00 through dg\_c07, 45
- dmaudit, 59
- dmcheck, 53, 58
- dmdidle, 63
- DMF administrative filesystems, 17
- dmf application for OpenVault, 38
- DMF configuration
  - existing site, 49
  - new site, 45
- DMF filesystems, 17
- DMF Manager, 45, 57
- DMF overview, 5
- DMF region, 12
- dmf.conf.copan\_maid, 1
- dmf.conf.fmc, 1
- /dmf/backups, 17
- /dmf/home, 17
- /dmf/journals, 17
- /dmf/move, 17
- /dmf/spool, 17
- /dmf/tmp, 17
- dmfman, 45
- dmget, 64
- /dmi\_fs, 46
- dmls, 63
- dmov\_keyfile, 53
- dmov\_loadtapes, 54

dmpu, 63  
dmvoladm, 55, 65, 73  
drive control program  
  See "DCP", 14  
drive groups, 45, 46  
DRIVE\_GROUPS, 50  
dual-state, 8  
DUMP\_MIRRORS, 30

## E

/etc/fstab, 30  
/etc/lk/keys.dat, 20  
EXPORT\_METRICS, 51

## F

fast-mount cache  
  definition, 8  
  parameters of interest, 44  
  sample file, 1, 45  
formatting RAID sets, 12  
formatting type, 24  
freeing and recalling file data, 8

## G

GROUP\_MEMBERS, 52

## H

HA configuration, 49  
high availability (HA), 12  
HOME\_DIR, 18

## I

identifiers, 13  
inodes remain on primary filesystem, 5  
integrated data mover functionality, 4  
INTERFACE, 49  
introduction, 1

## L

LCP, 14  
library control program, 14  
library server, 45  
libraryserver object, 51  
licenses, 20  
log files, 17  
logical unit, 11  
LS\_NAMES, 51  
ls\_tasks object, 52  
LUN, 11

## M

MAID shelf contents, 11  
maid\_ls, 45  
maintenance tasks, 65  
metrics, 51  
mg0 and mg1, 45  
migrate groups, 45  
migrategroup object, 52  
migrating file data, 8  
migration test, 63  
mkfs.xfs, 12, 35  
mounting a migration volume, 57  
msp object, 51

**N**

- naming conventions, 13
- network requirements, 16
- non-DMF region, 12
- non-DMF use of a RAID set, 30

**O**

- offline, 8
- OpenVault communication procedures, 20
- OpenVault configuration, 37
- ov\_admin, 38, 71
- ov\_copan, 12
  - create, 25
  - format, 24, 28
  - list, 25
  - listdrives, 25
  - listinfo, 25
  - listluns, 25
  - listvols, 25
  - overview, 23
  - unformat, 68
- OV\_INTERCHANGE\_MODE, 50
- ov\_mount, 57
- ov\_purge, 67
- ov\_shelf check, 69
- ov\_shelf create, 37
- ov\_shelf delete, 70
- ov\_shelf precheck, 22, 69
- ov\_shelf update, 70, 73
- ov\_stat, 54
- ov\_vol, 67
- overview of the configuration steps, 20
- owner\_node, 23

**P**

- parallel data mover node, 4
- Parallel Data Mover Option, 4

- parameters summary, 43
- permanent storage, 5
- Platform Service Manager, 26
- power budget, 11
- power budget changes, 70
- precheck, 22
- preliminary requirements, 16
- privileged instance of the dmf application, 38
- PSM, 26

**R**

- RAID set
  - description of, 11
  - division, 33
  - formatting, 12, 21
  - identifier, 13
  - requirements and backup filesystem, 18
- repair OpenVault components, 73
- requirements, 16
- reserved space, 18
- RESERVED\_VOLUMES, 51
- retention period for backups, 18
- retrieve a migrated file, 64
- ROTATION\_STRATEGY, 52
- ROUND\_ROBIN\_BY\_BYTES, 52
- RUN\_TASK, 52

**S**

- sample configuration file, 1
- sample files, 1
- scratch filesystem, 17
- security keys for DMF and OpenVault communication, 53
- security keys in ov\_admin, 41
- SELECT\_VG, 52
- SERVER\_NAME, 48
- sg devices, 26

- shelf addition, 69
- shelf component verification, 69
- shelf formatting
  - DMF and backups, 30
  - DMF use only, 28
- shelf ID, 13, 24
- shelf listing, 25
- shelf management, 12
- shelf mapping to device names, 26
- shelf order, 2, 26
- shelf update, 70
- stop OpenVault components, 71
- system overview, 2
- system requirements, 16

## T

- testing, 57
- theory of archiving, 5
- THRESHOLD, 52
- troubleshooting, 73

## U

- unexpected records in the OpenVault database, 22
- unformat, 68
- unformatting a RAID set, 67
- units, 25
- unprivileged instance of the dmfs application, 38
- update a shelf, 70

## V

- validation of DMF configuration, 57
- validation of the configuration, 53
- vg\_c00 through vg\_c07, 45
- volume creation with ov\_copan, 25
- volume deletion from a RAID set, 65
- volume groups, 45
- volume serial number
  - See "VSN", 13
- volumes, 11
- VSN, 13
- VV volume identifier, 13

## W

- wildcard characters in ov\_admin, 42
- WWPN of shelf ports, 26

## X

- xvm, 12, 35, 68

## Z

- zone requirements, 16